



FLIPLÖK

3.5 inch Inward Home Lock INSTRUCTIONS


PACKAGE CONTENTS

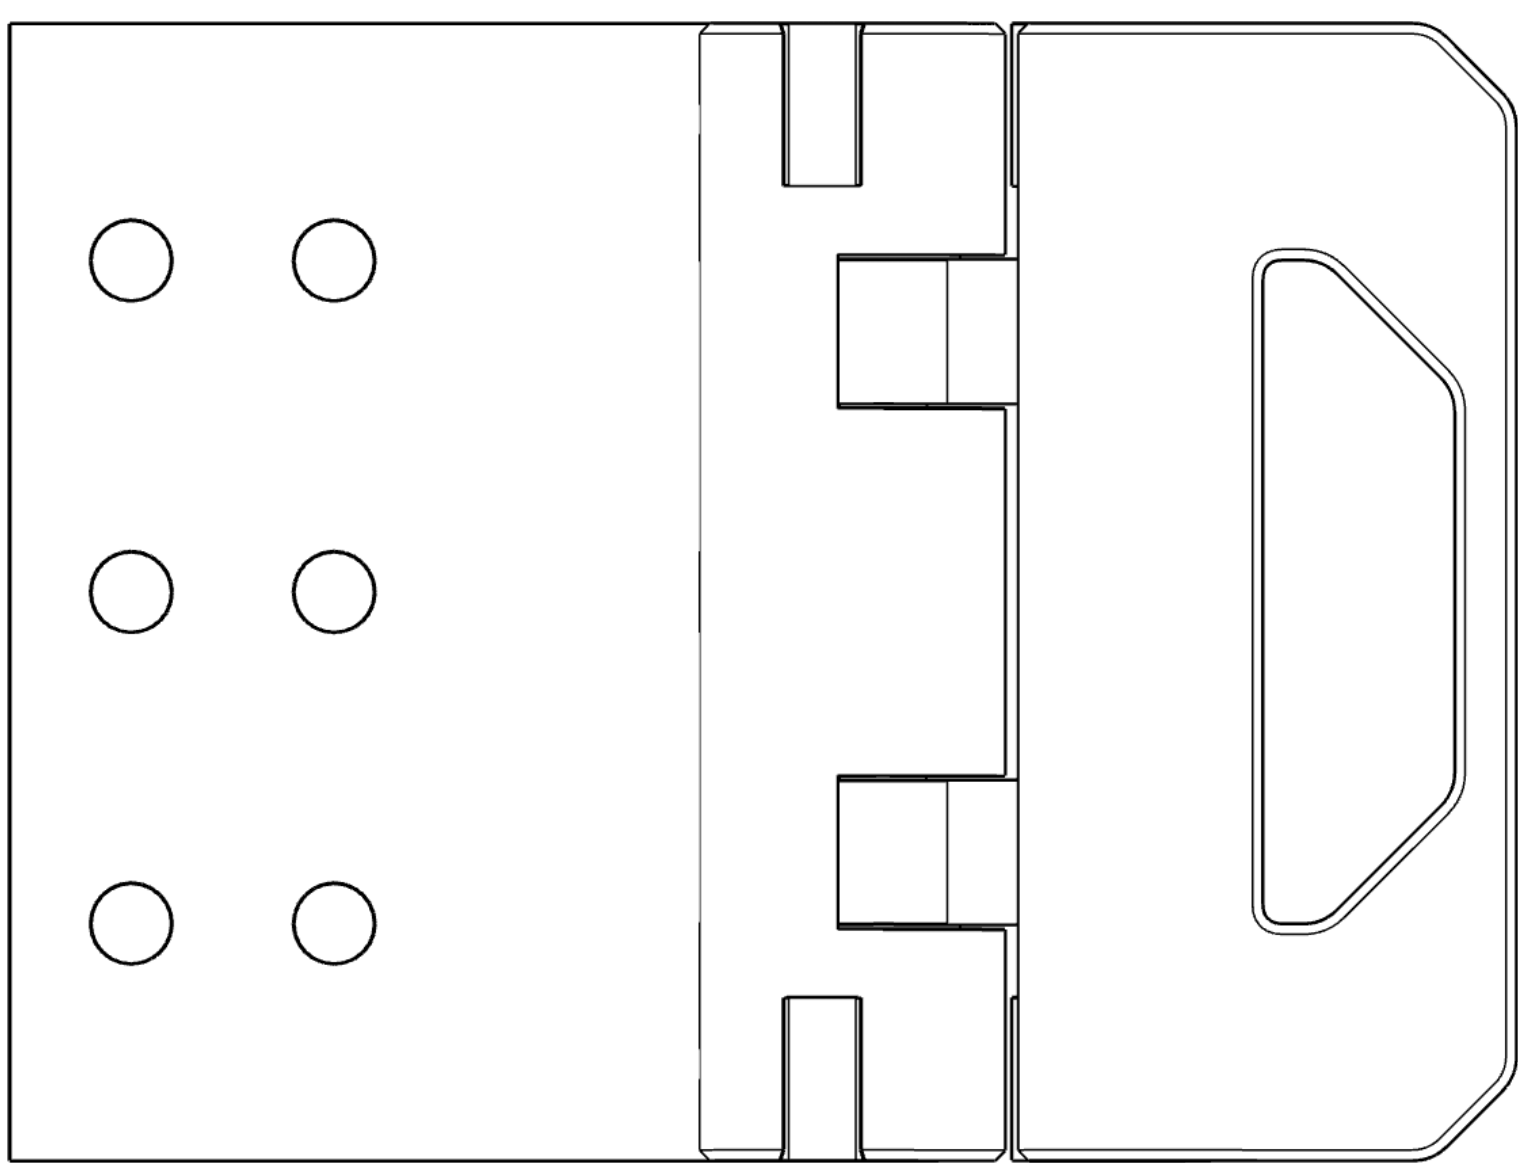

LOCK

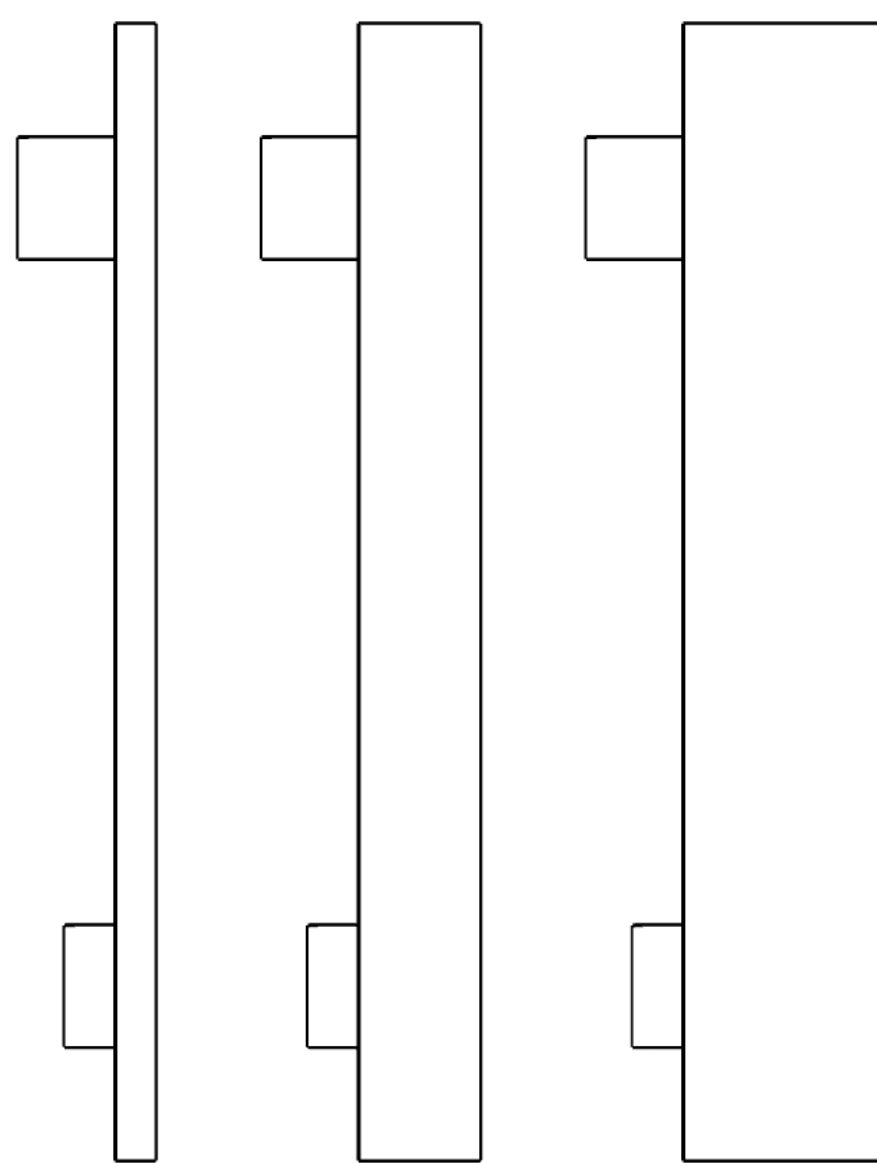


1/8" 3/8" 5/8"
SPACERS

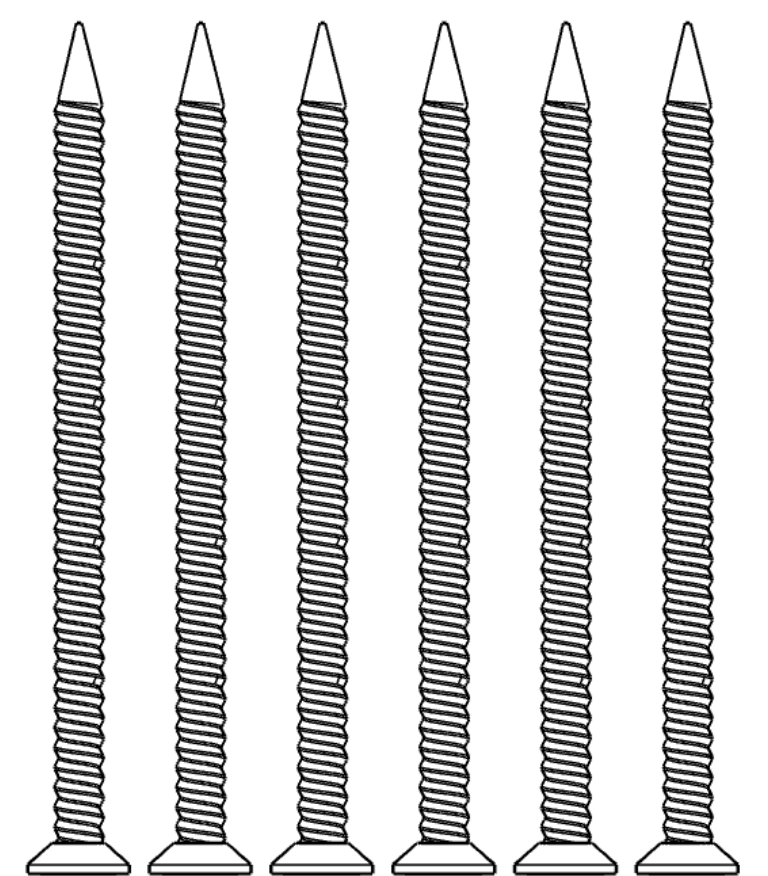


6x SCREWS

TOOLS REQUIRED

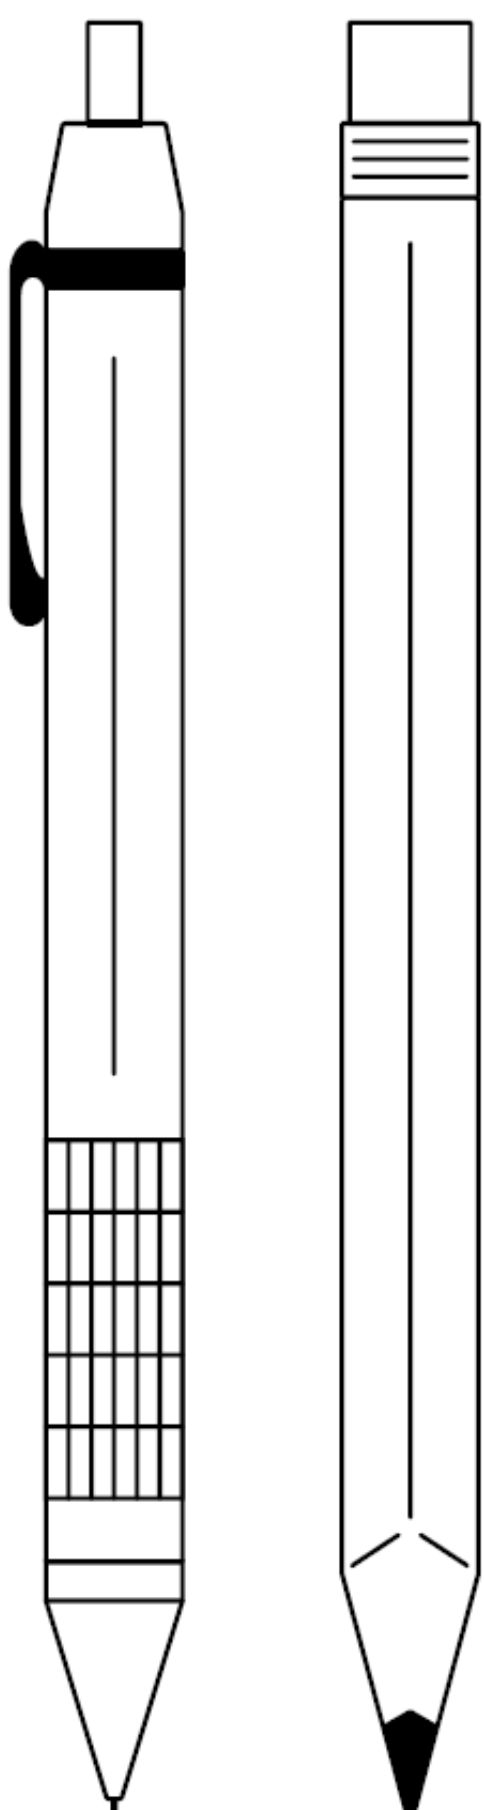


Pen or Pencil

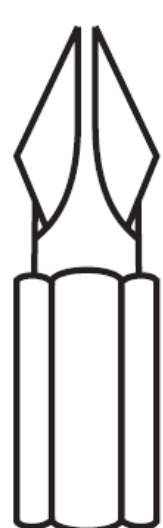

Phillips
Bit



1/8"
Drill Bit

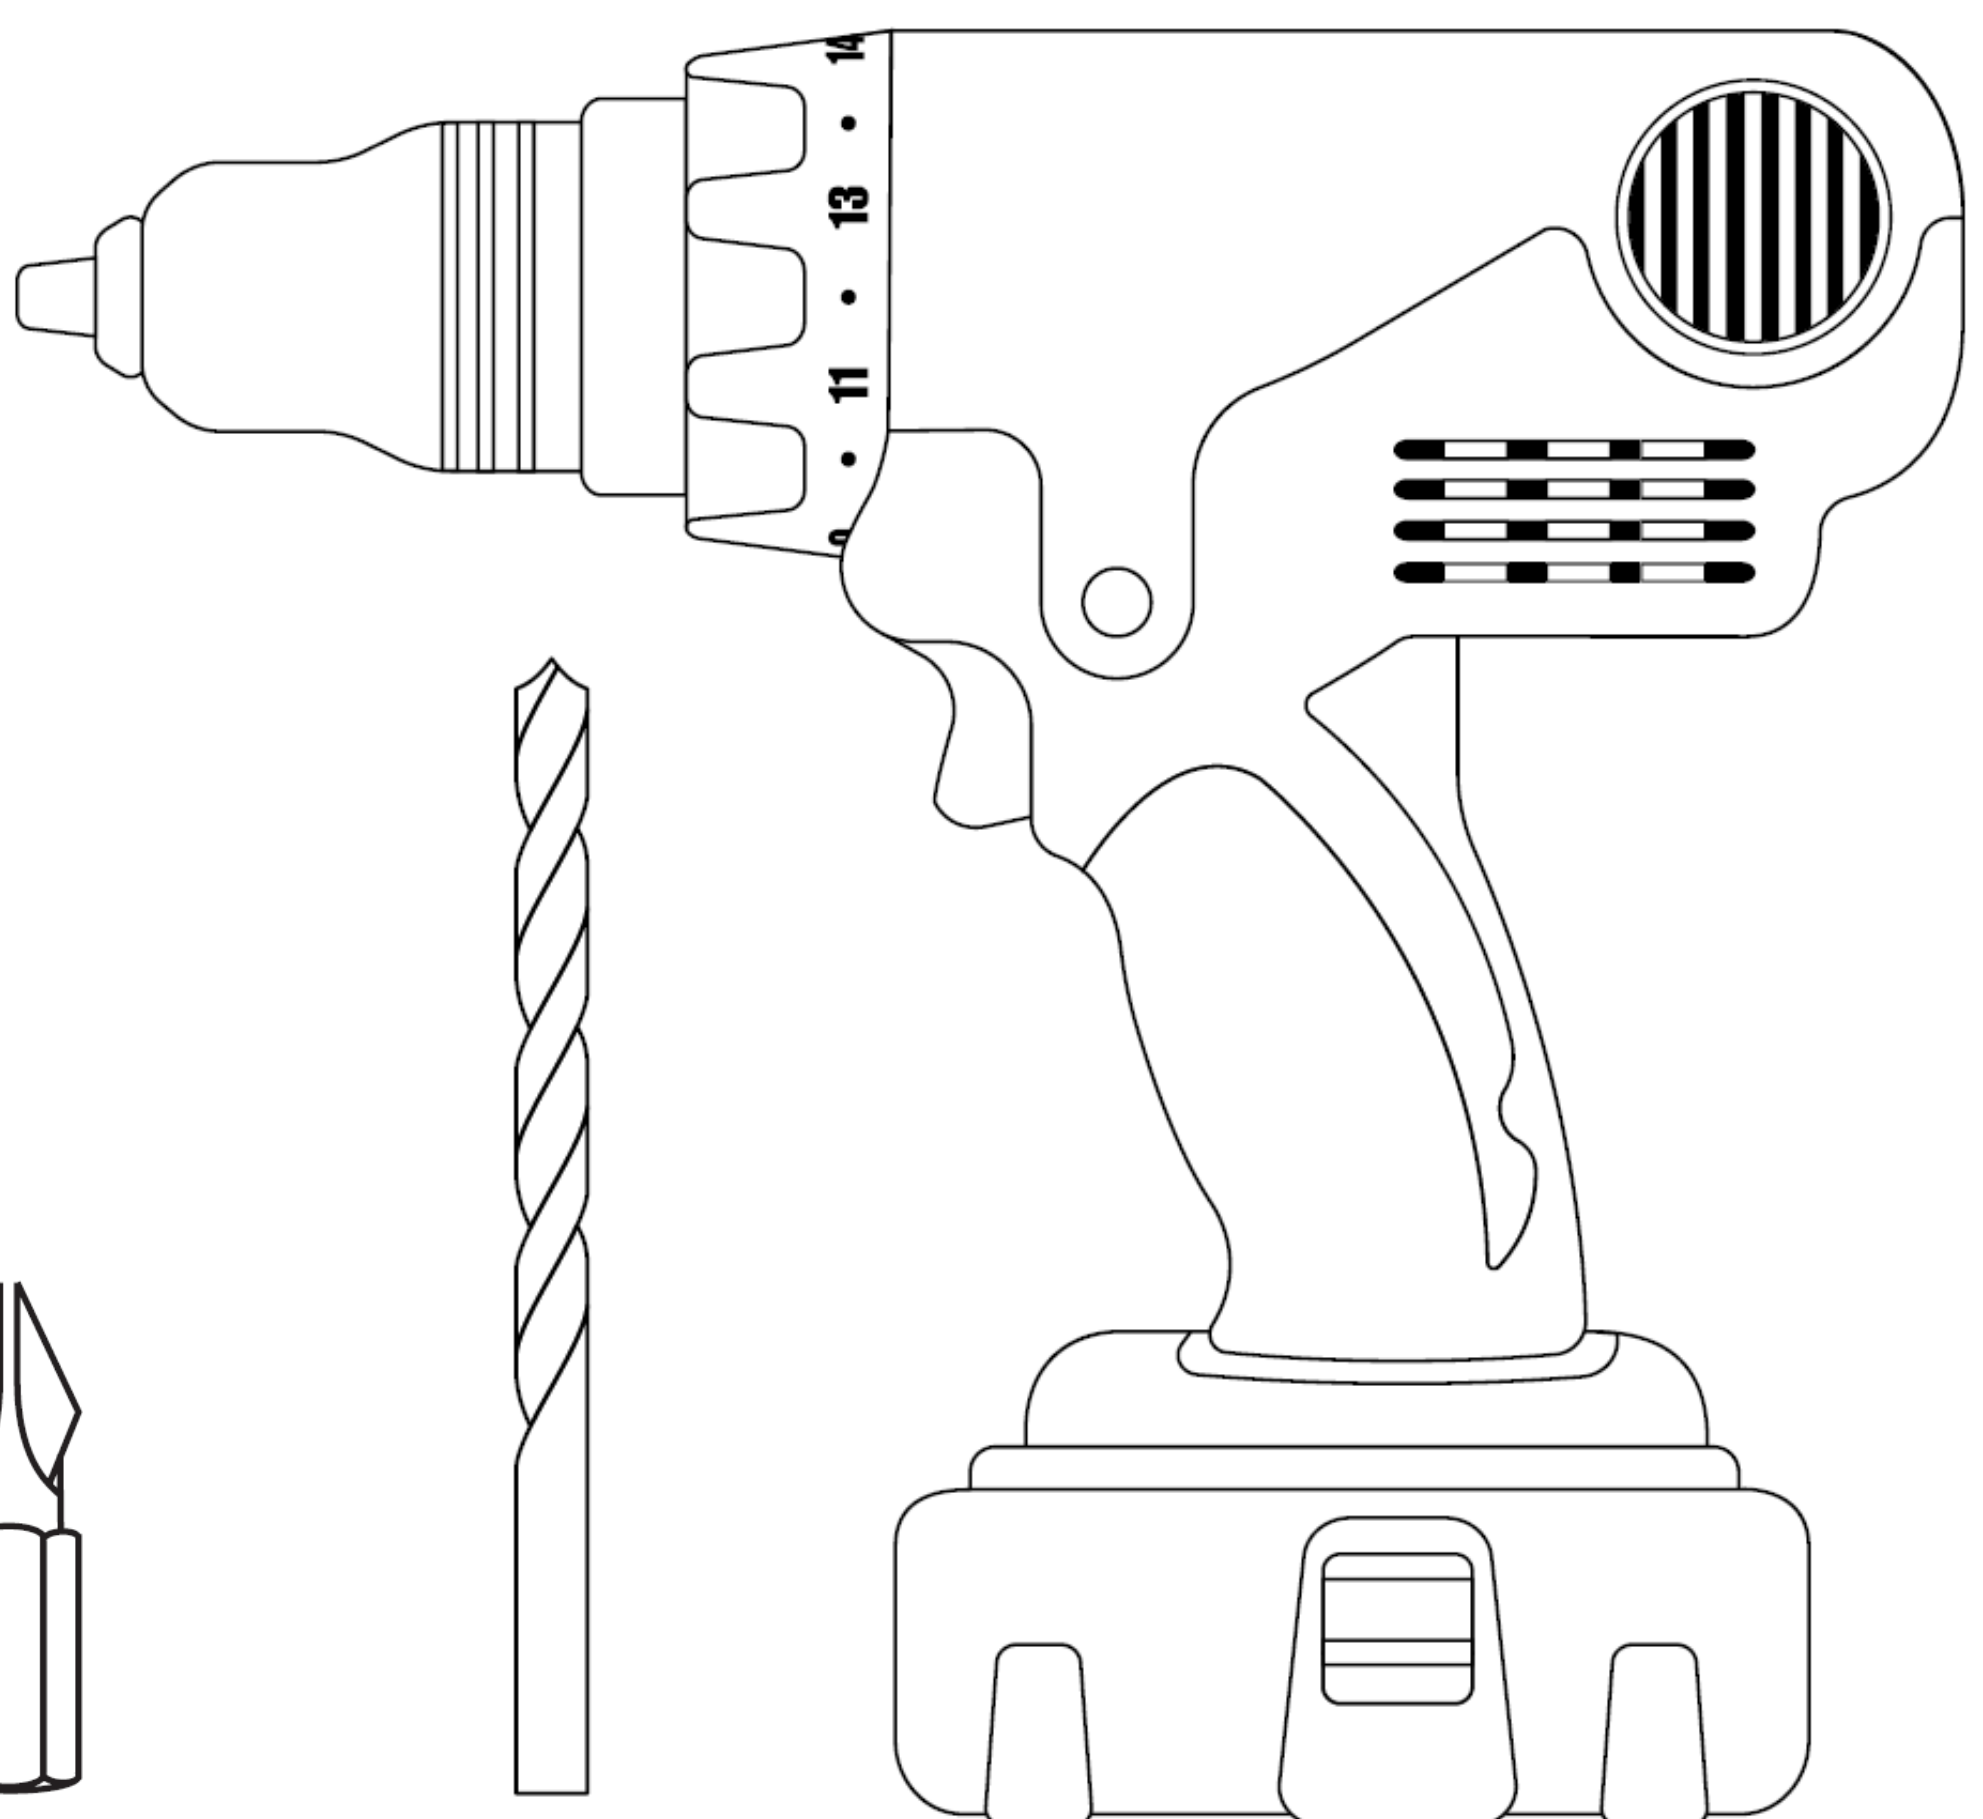


Power Drill


1

Find out your door's swing direction, stand inside your home and check whether it opens to the left or the right.

LEFT SWING

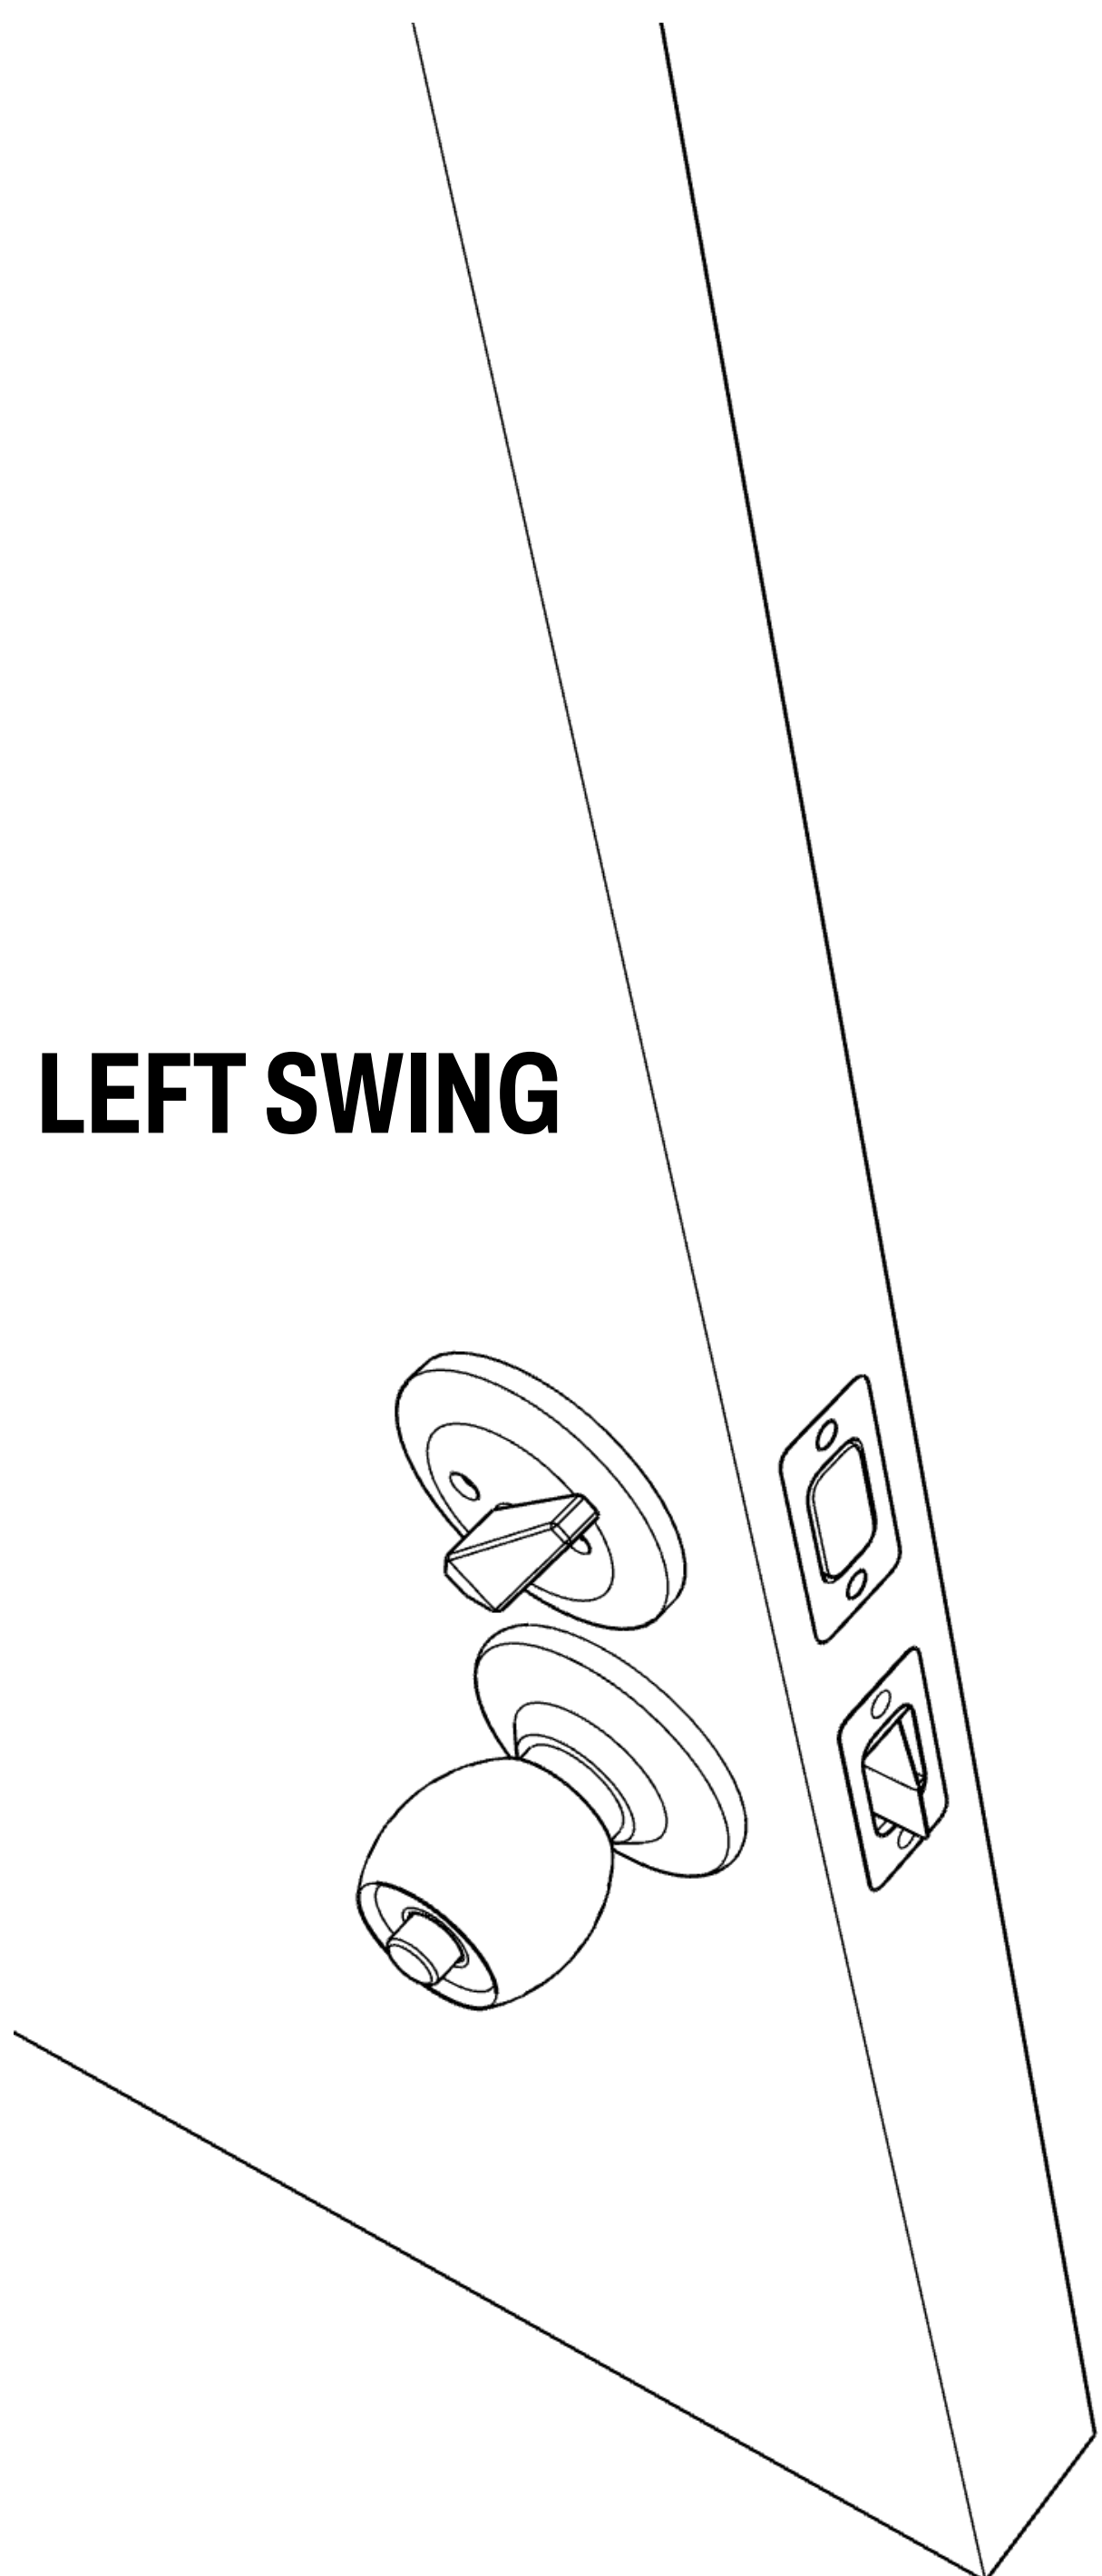


RIGHT SWING

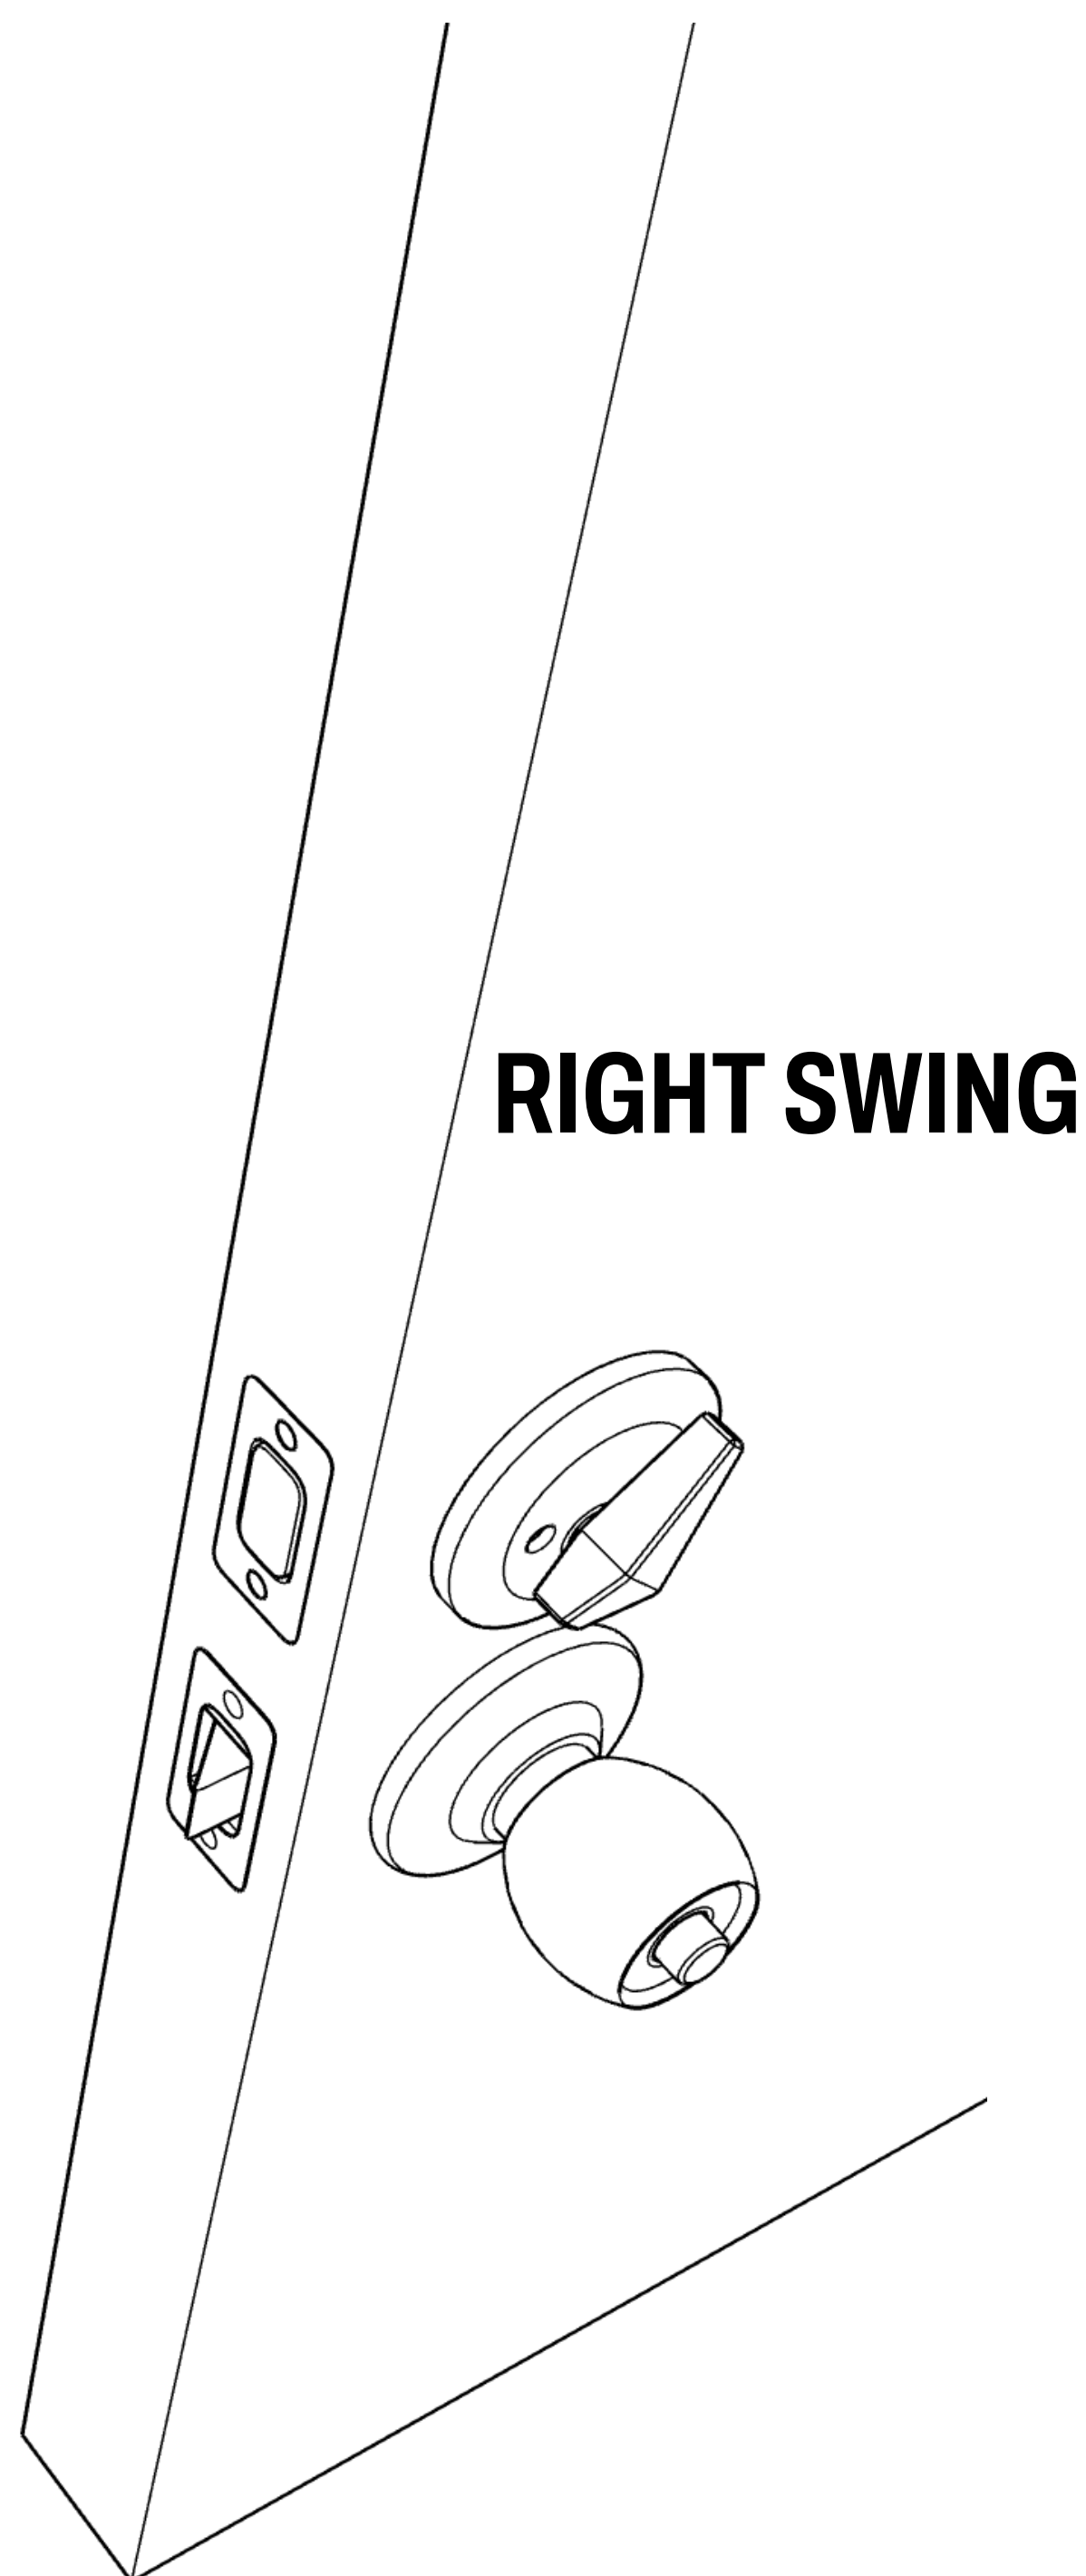

2


How to switch between left swing and right swing mode.

LEFT SWING

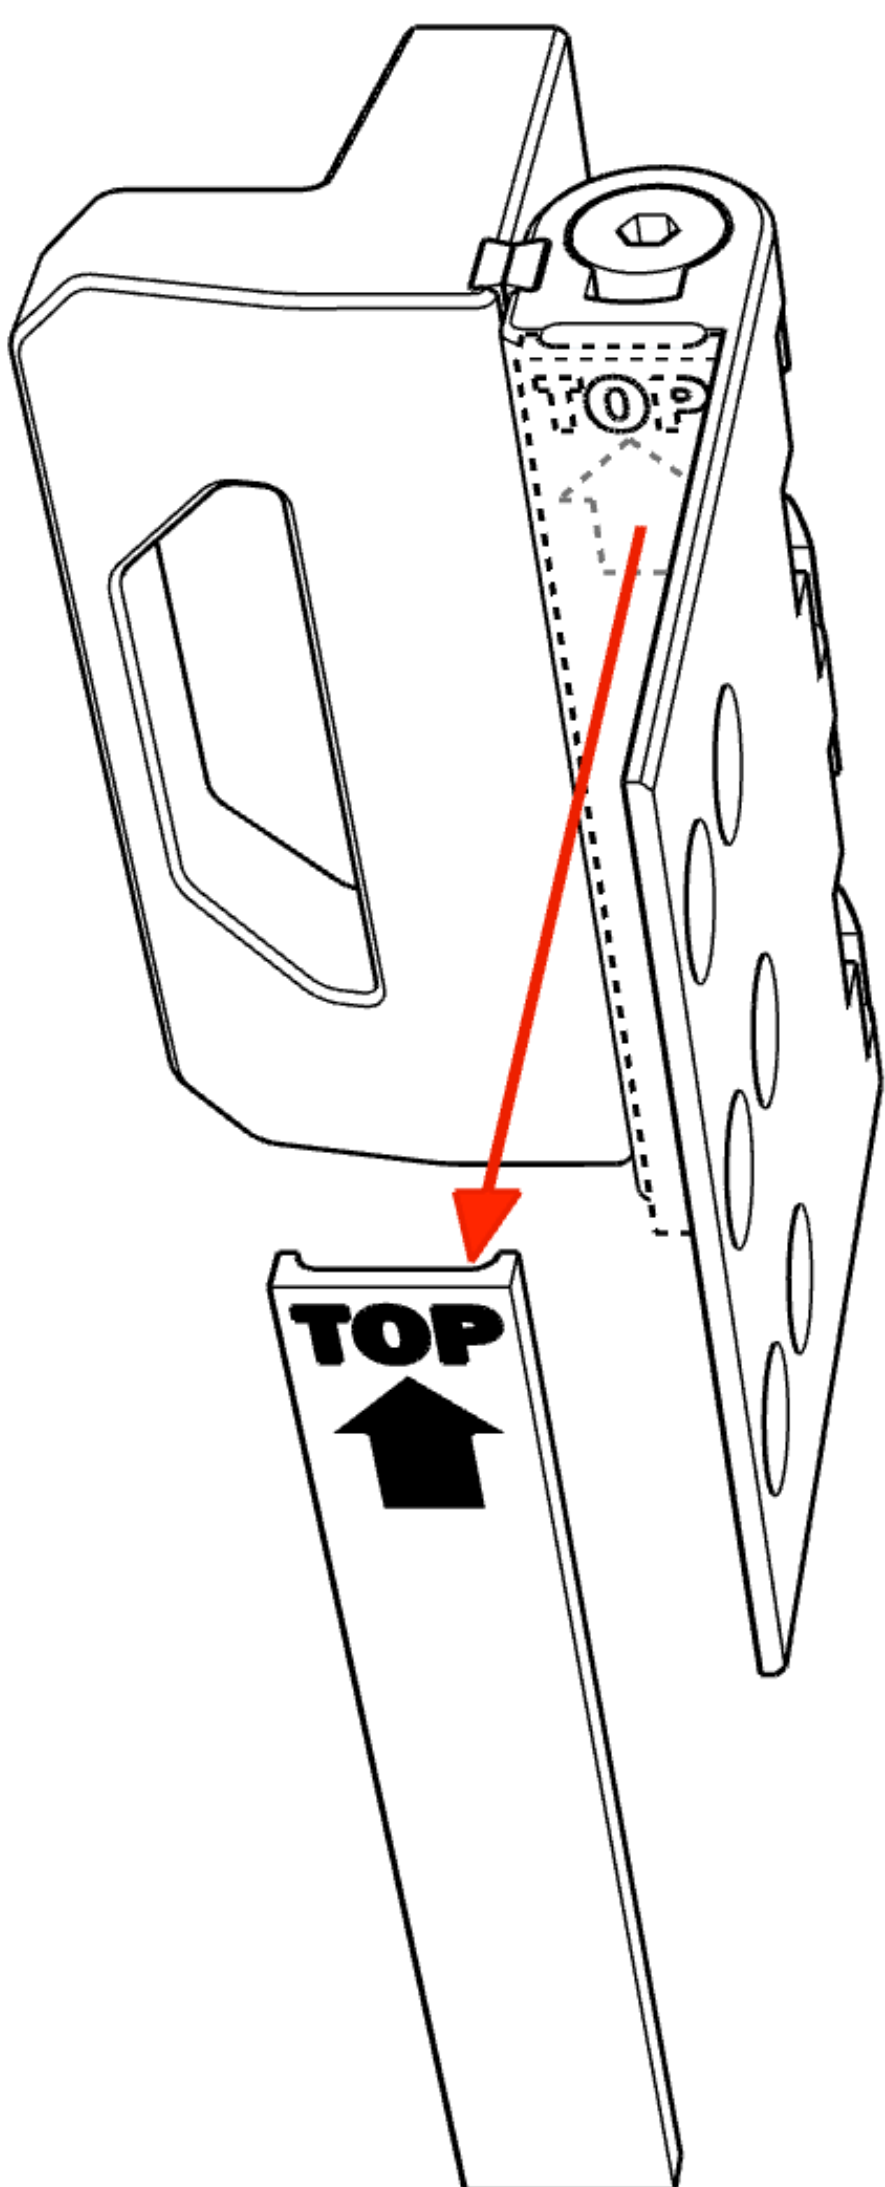

Remove Spacer

RIGHT SWING

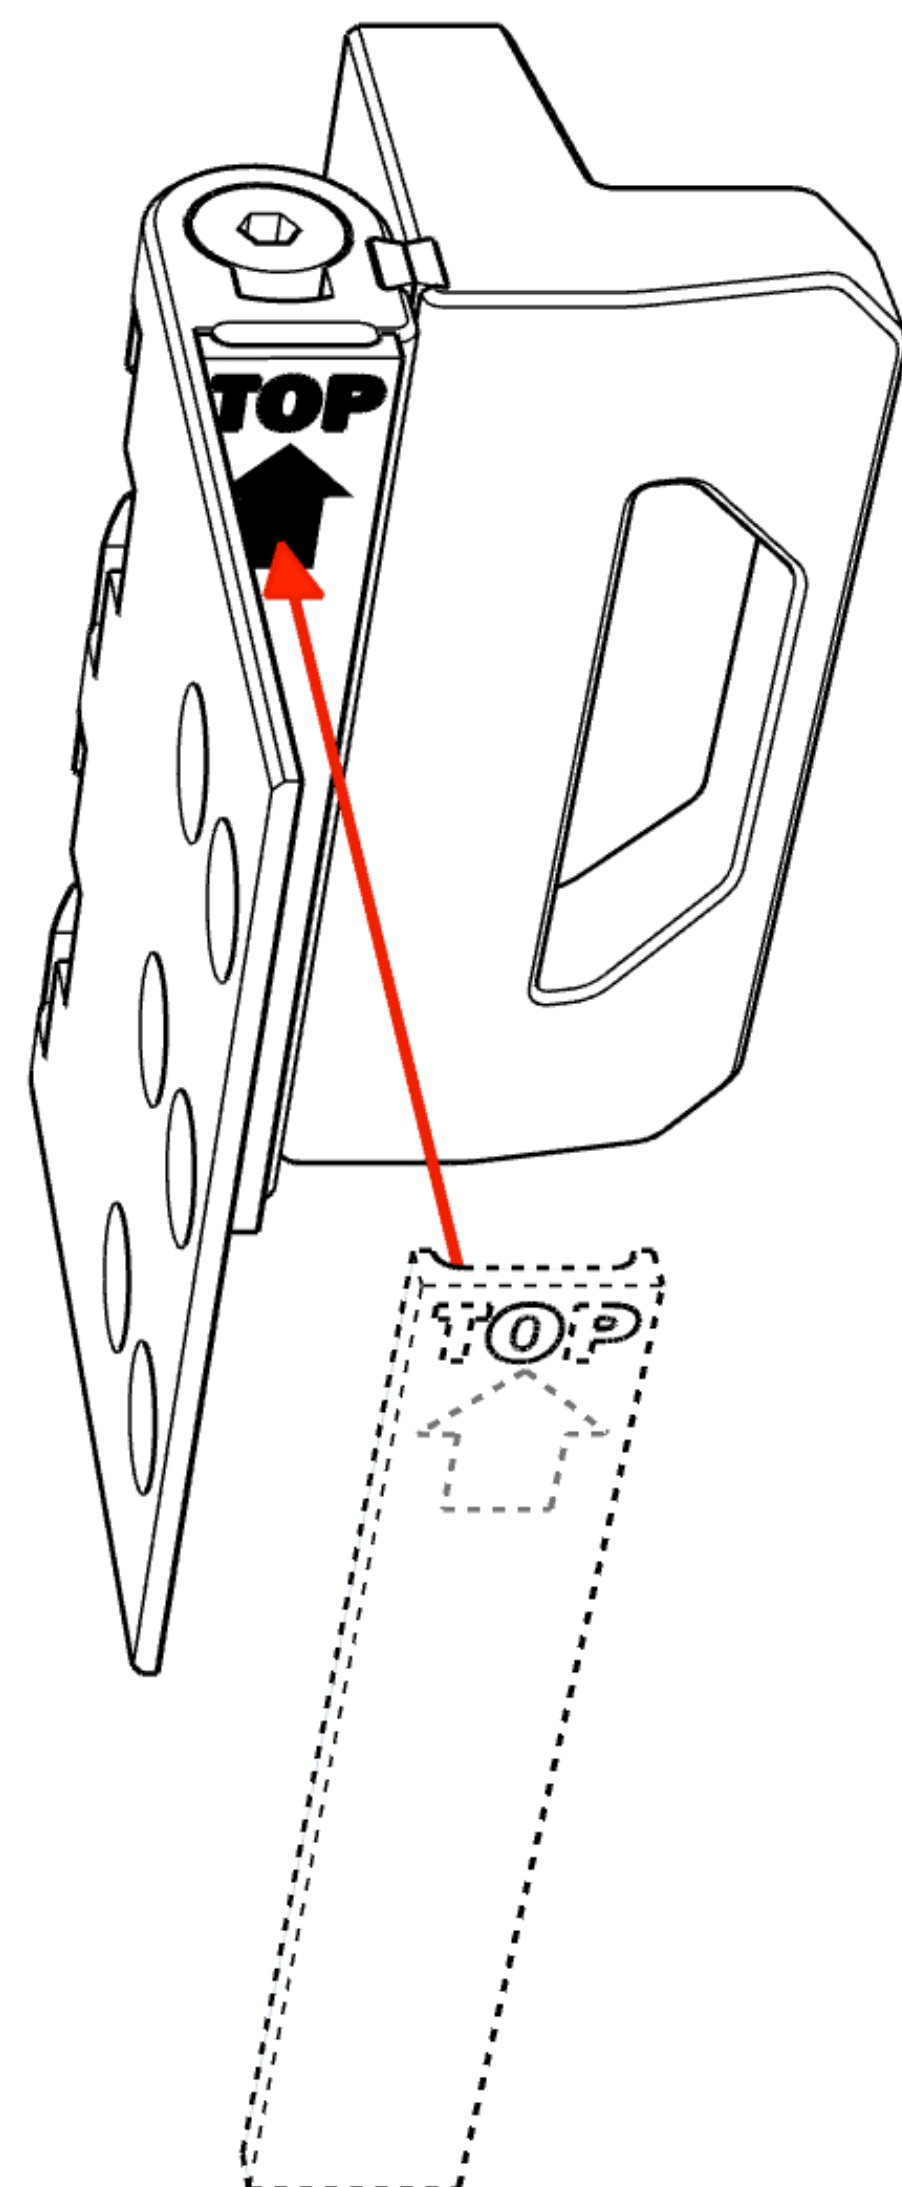

Install Spacer

Flip the lock around


Ensure that the word
"TOP"

on the spacer is oriented upward.

3


POSITION of the Lock

With the door closed, slide the FlipLok between the door and the door frame.

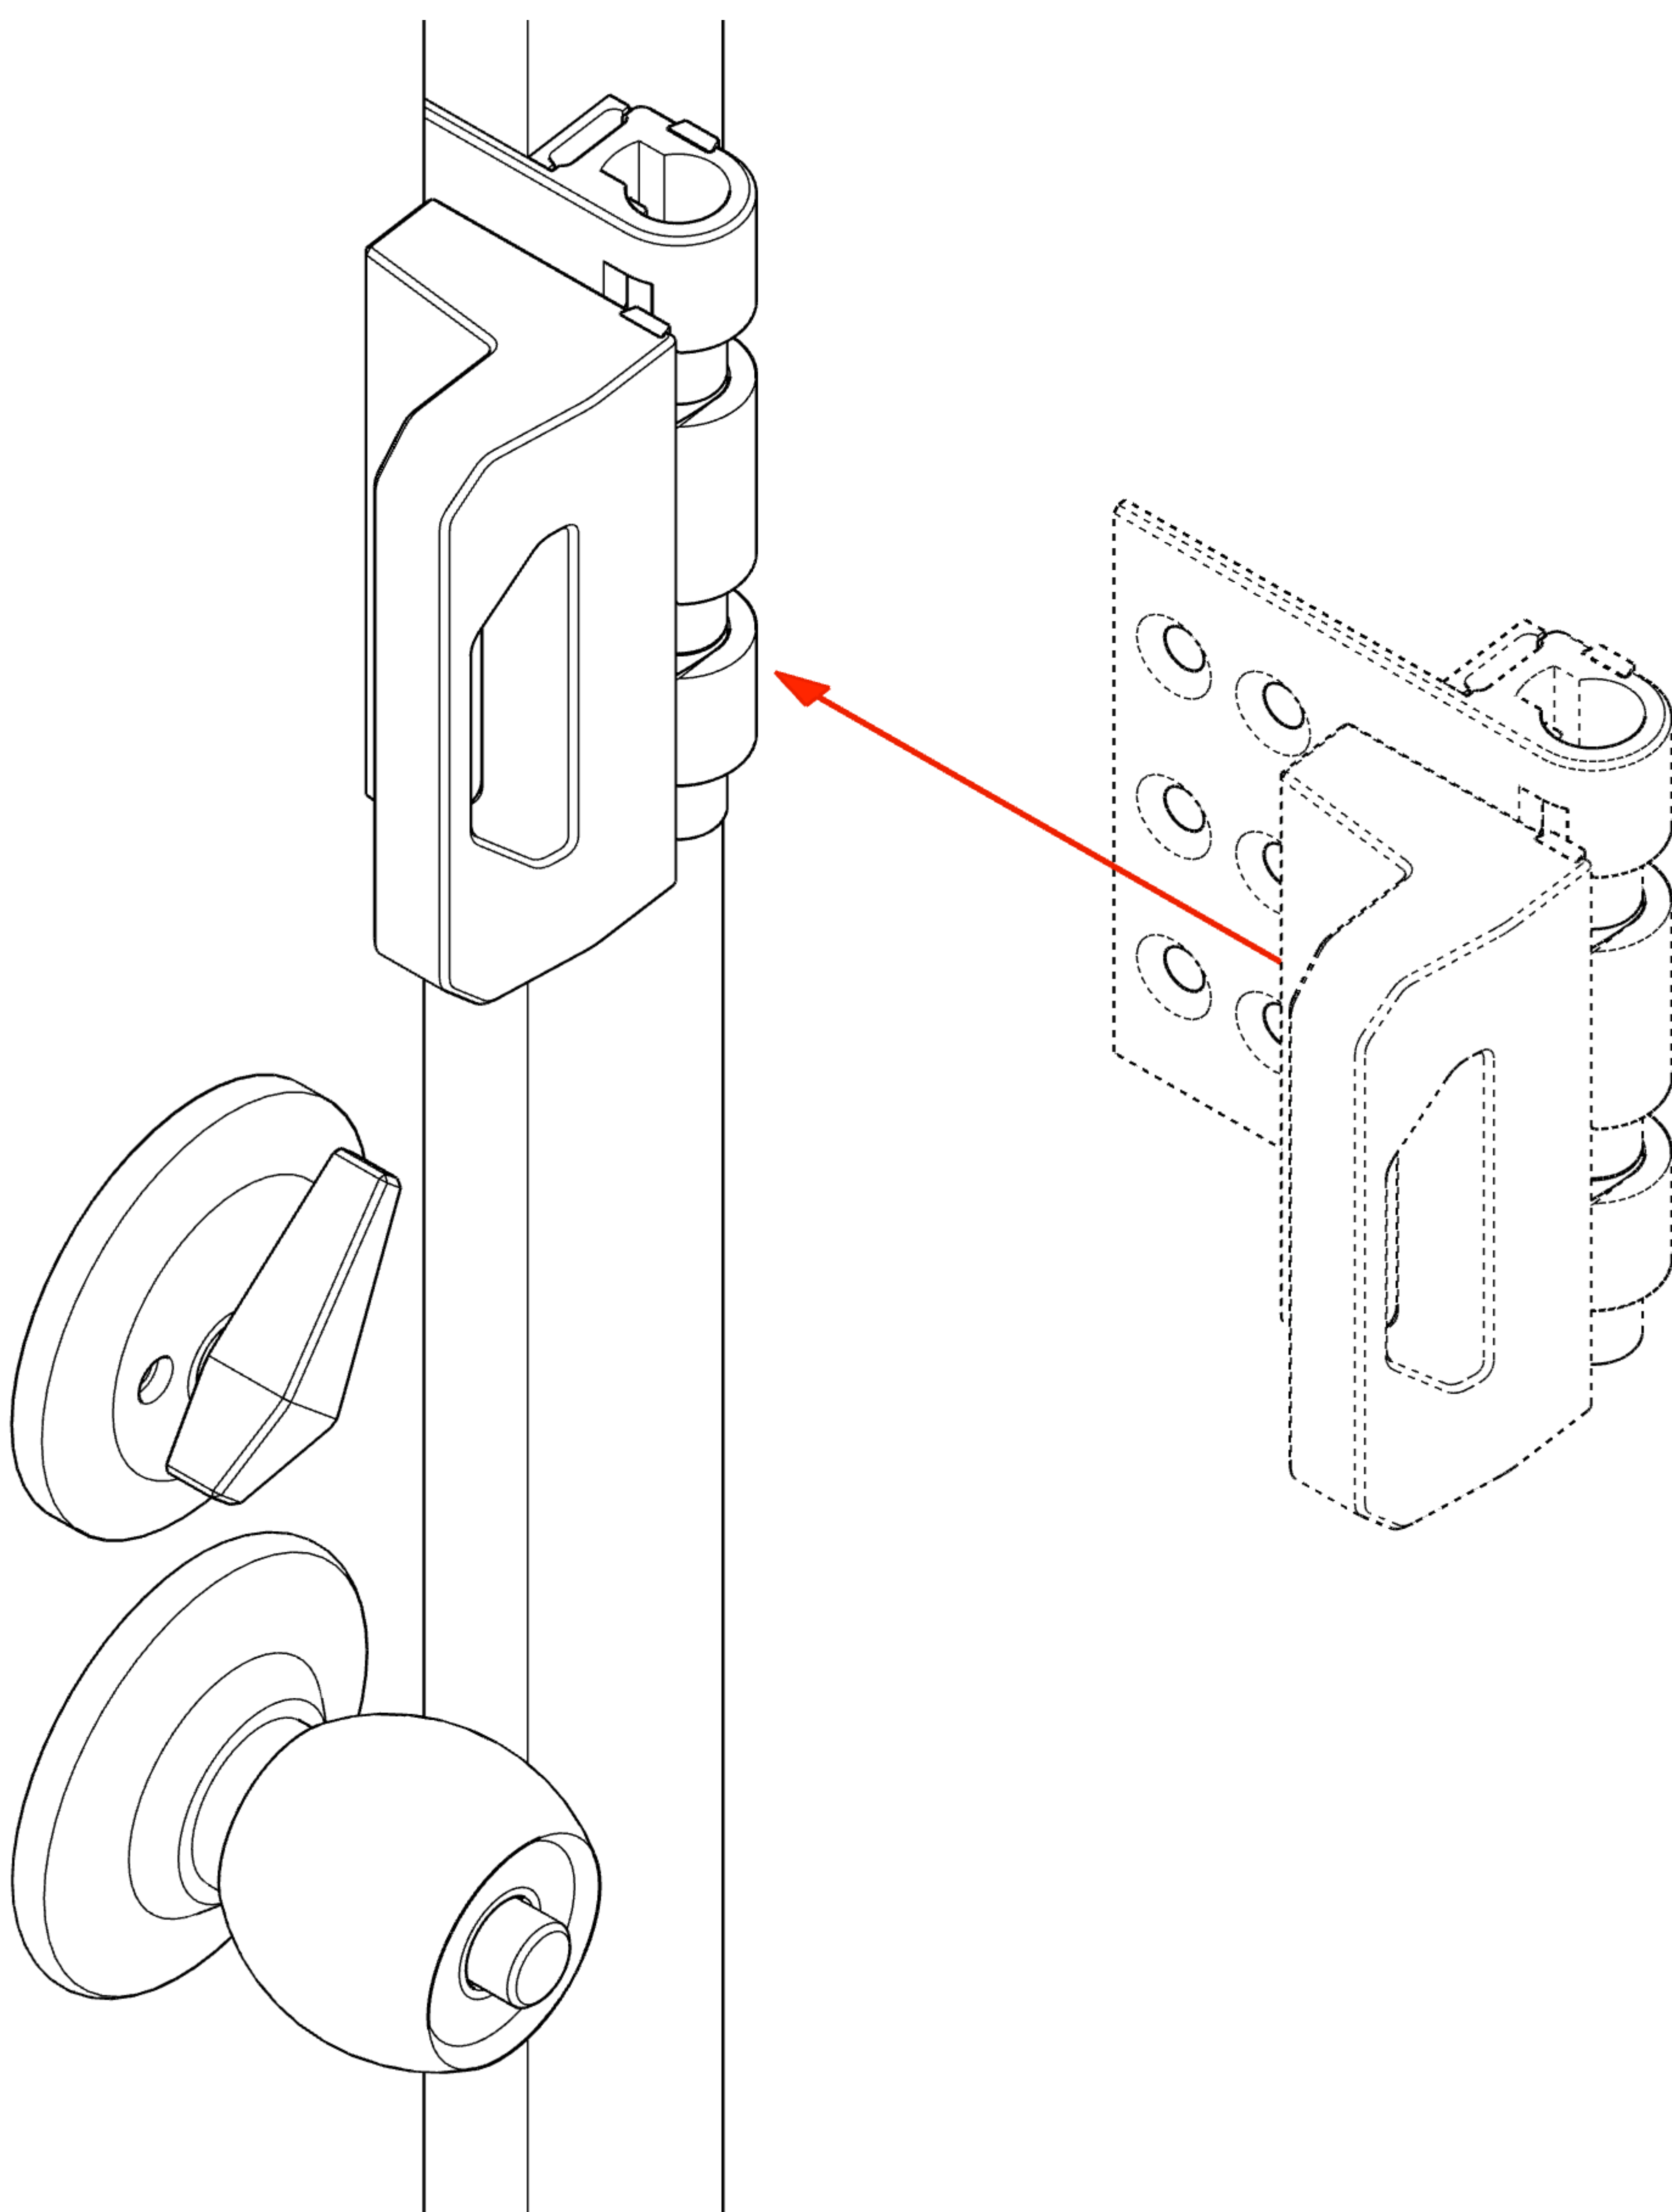


4

To avoid any scratches on your door from the lock, make sure to leave a bit of space between the two.

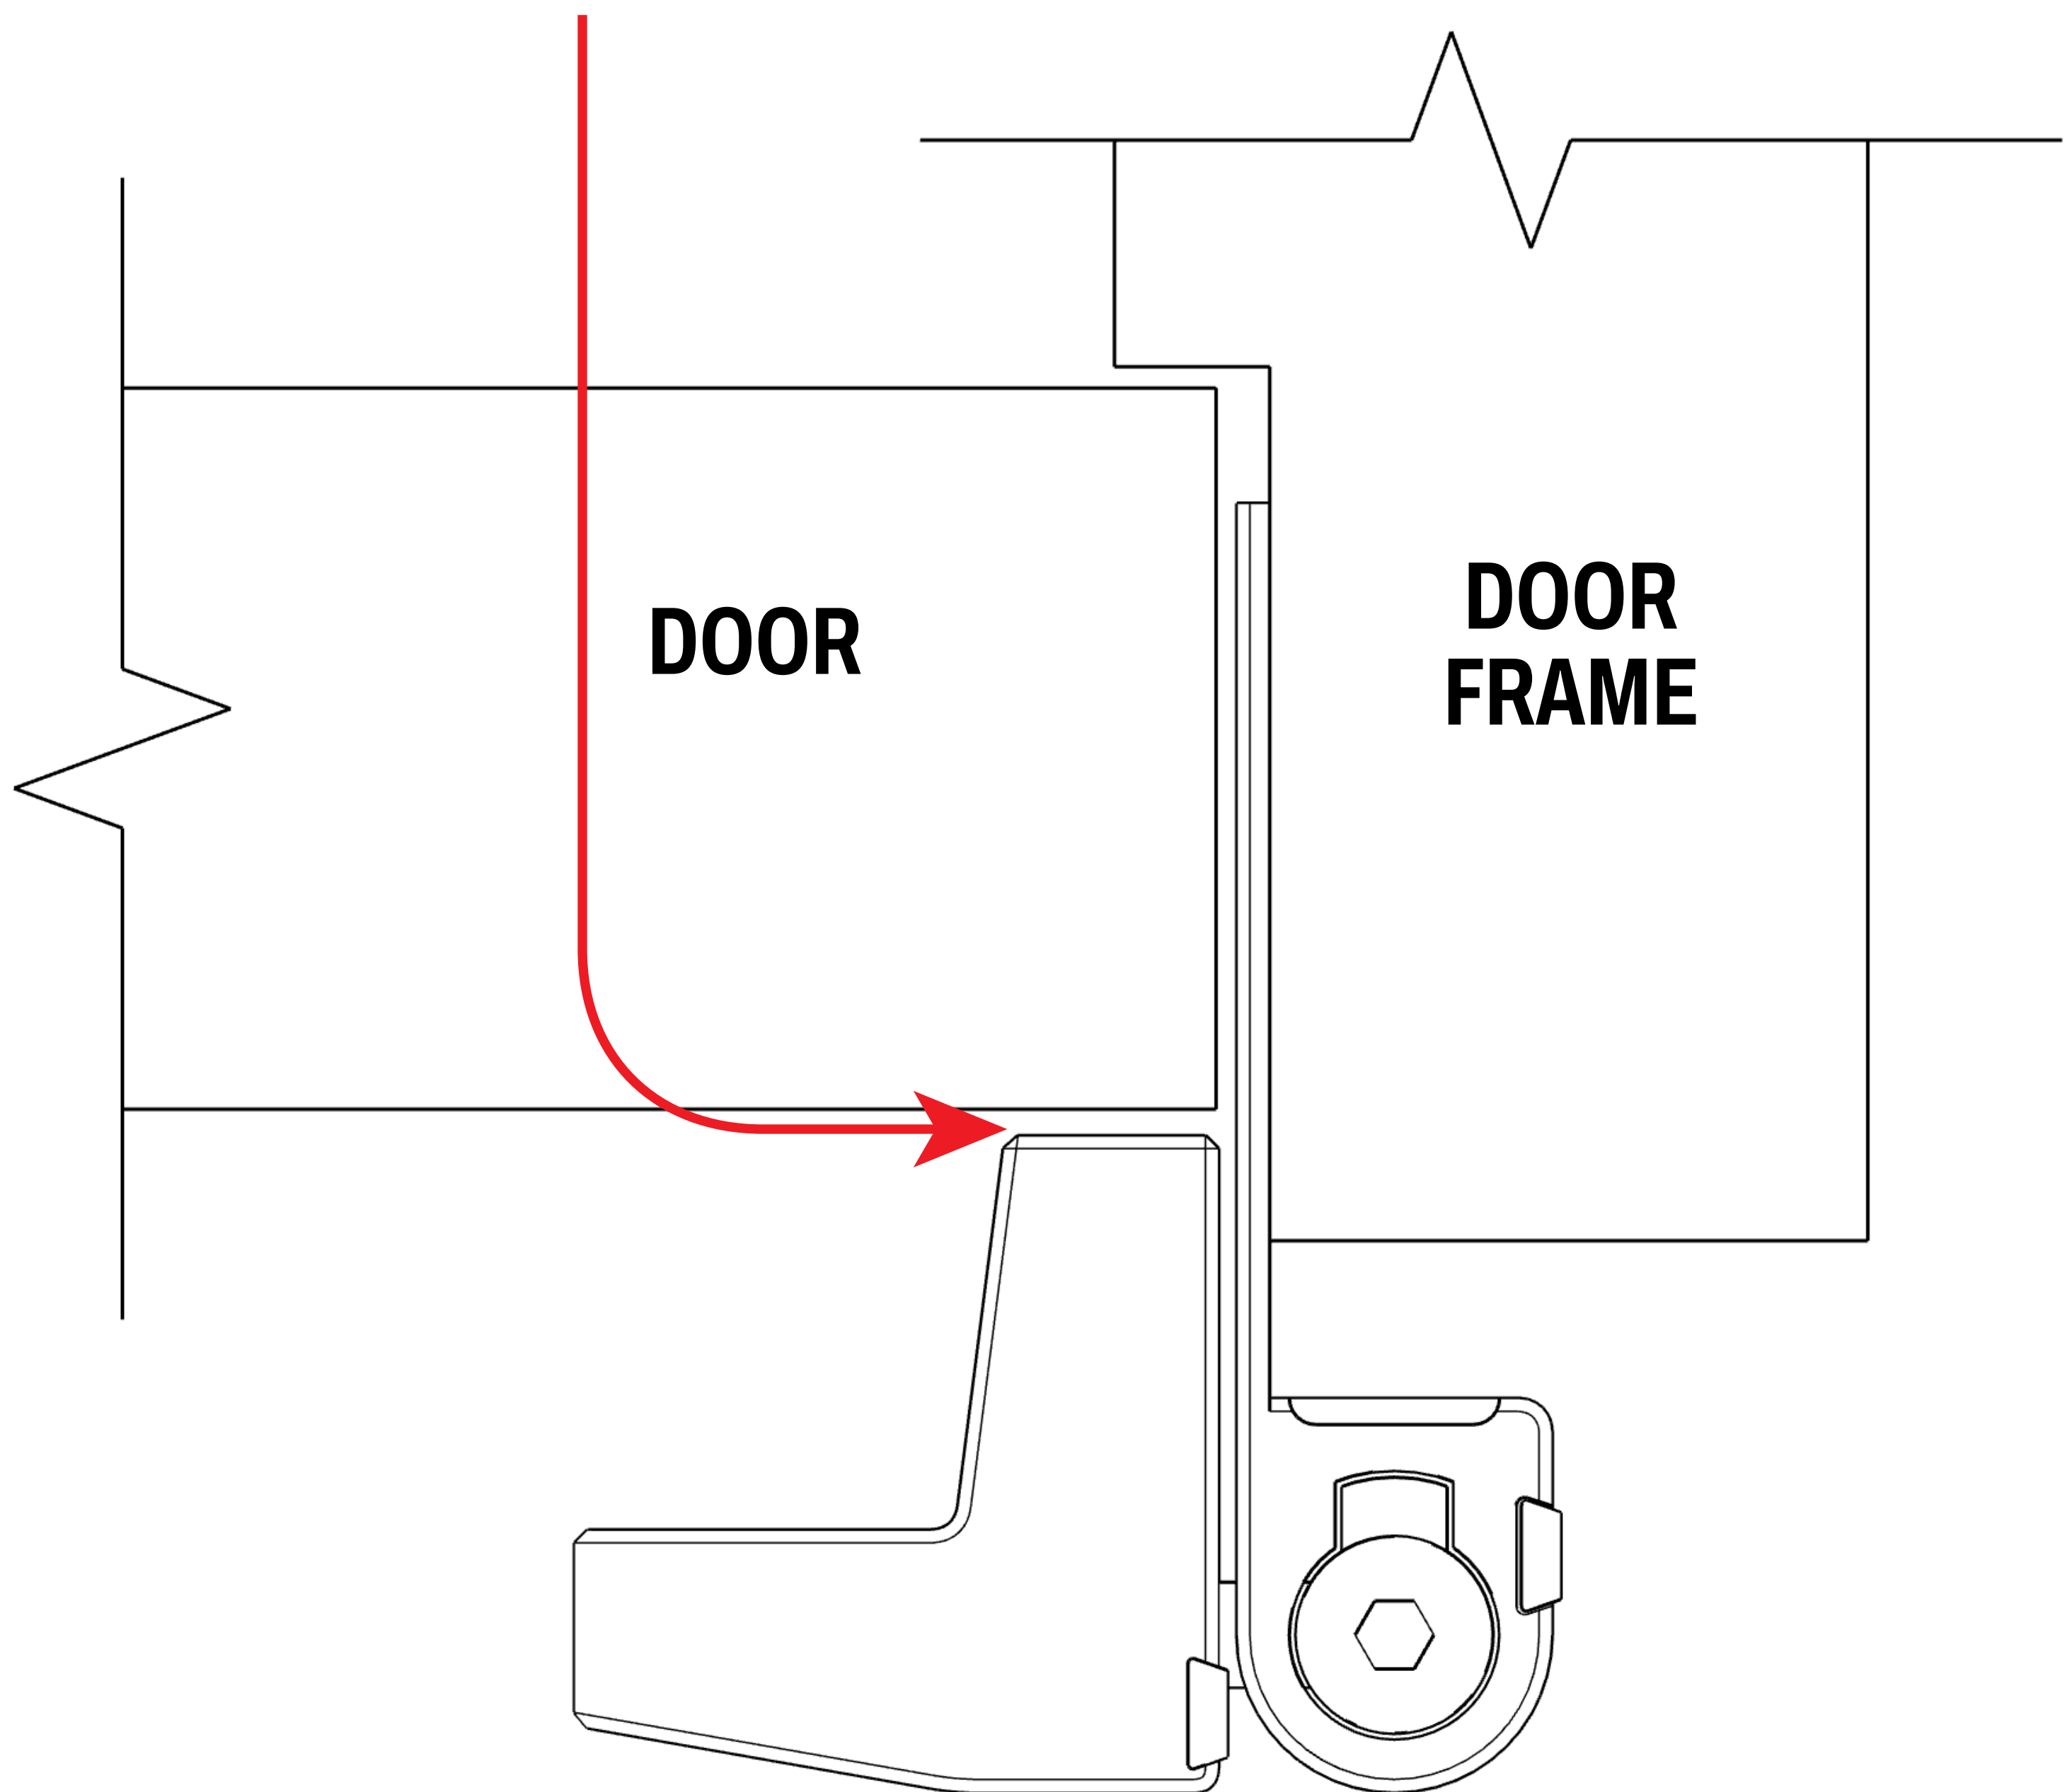


5

Find the appropriate sized spacer to fill in the gap between the lock and the door frame.

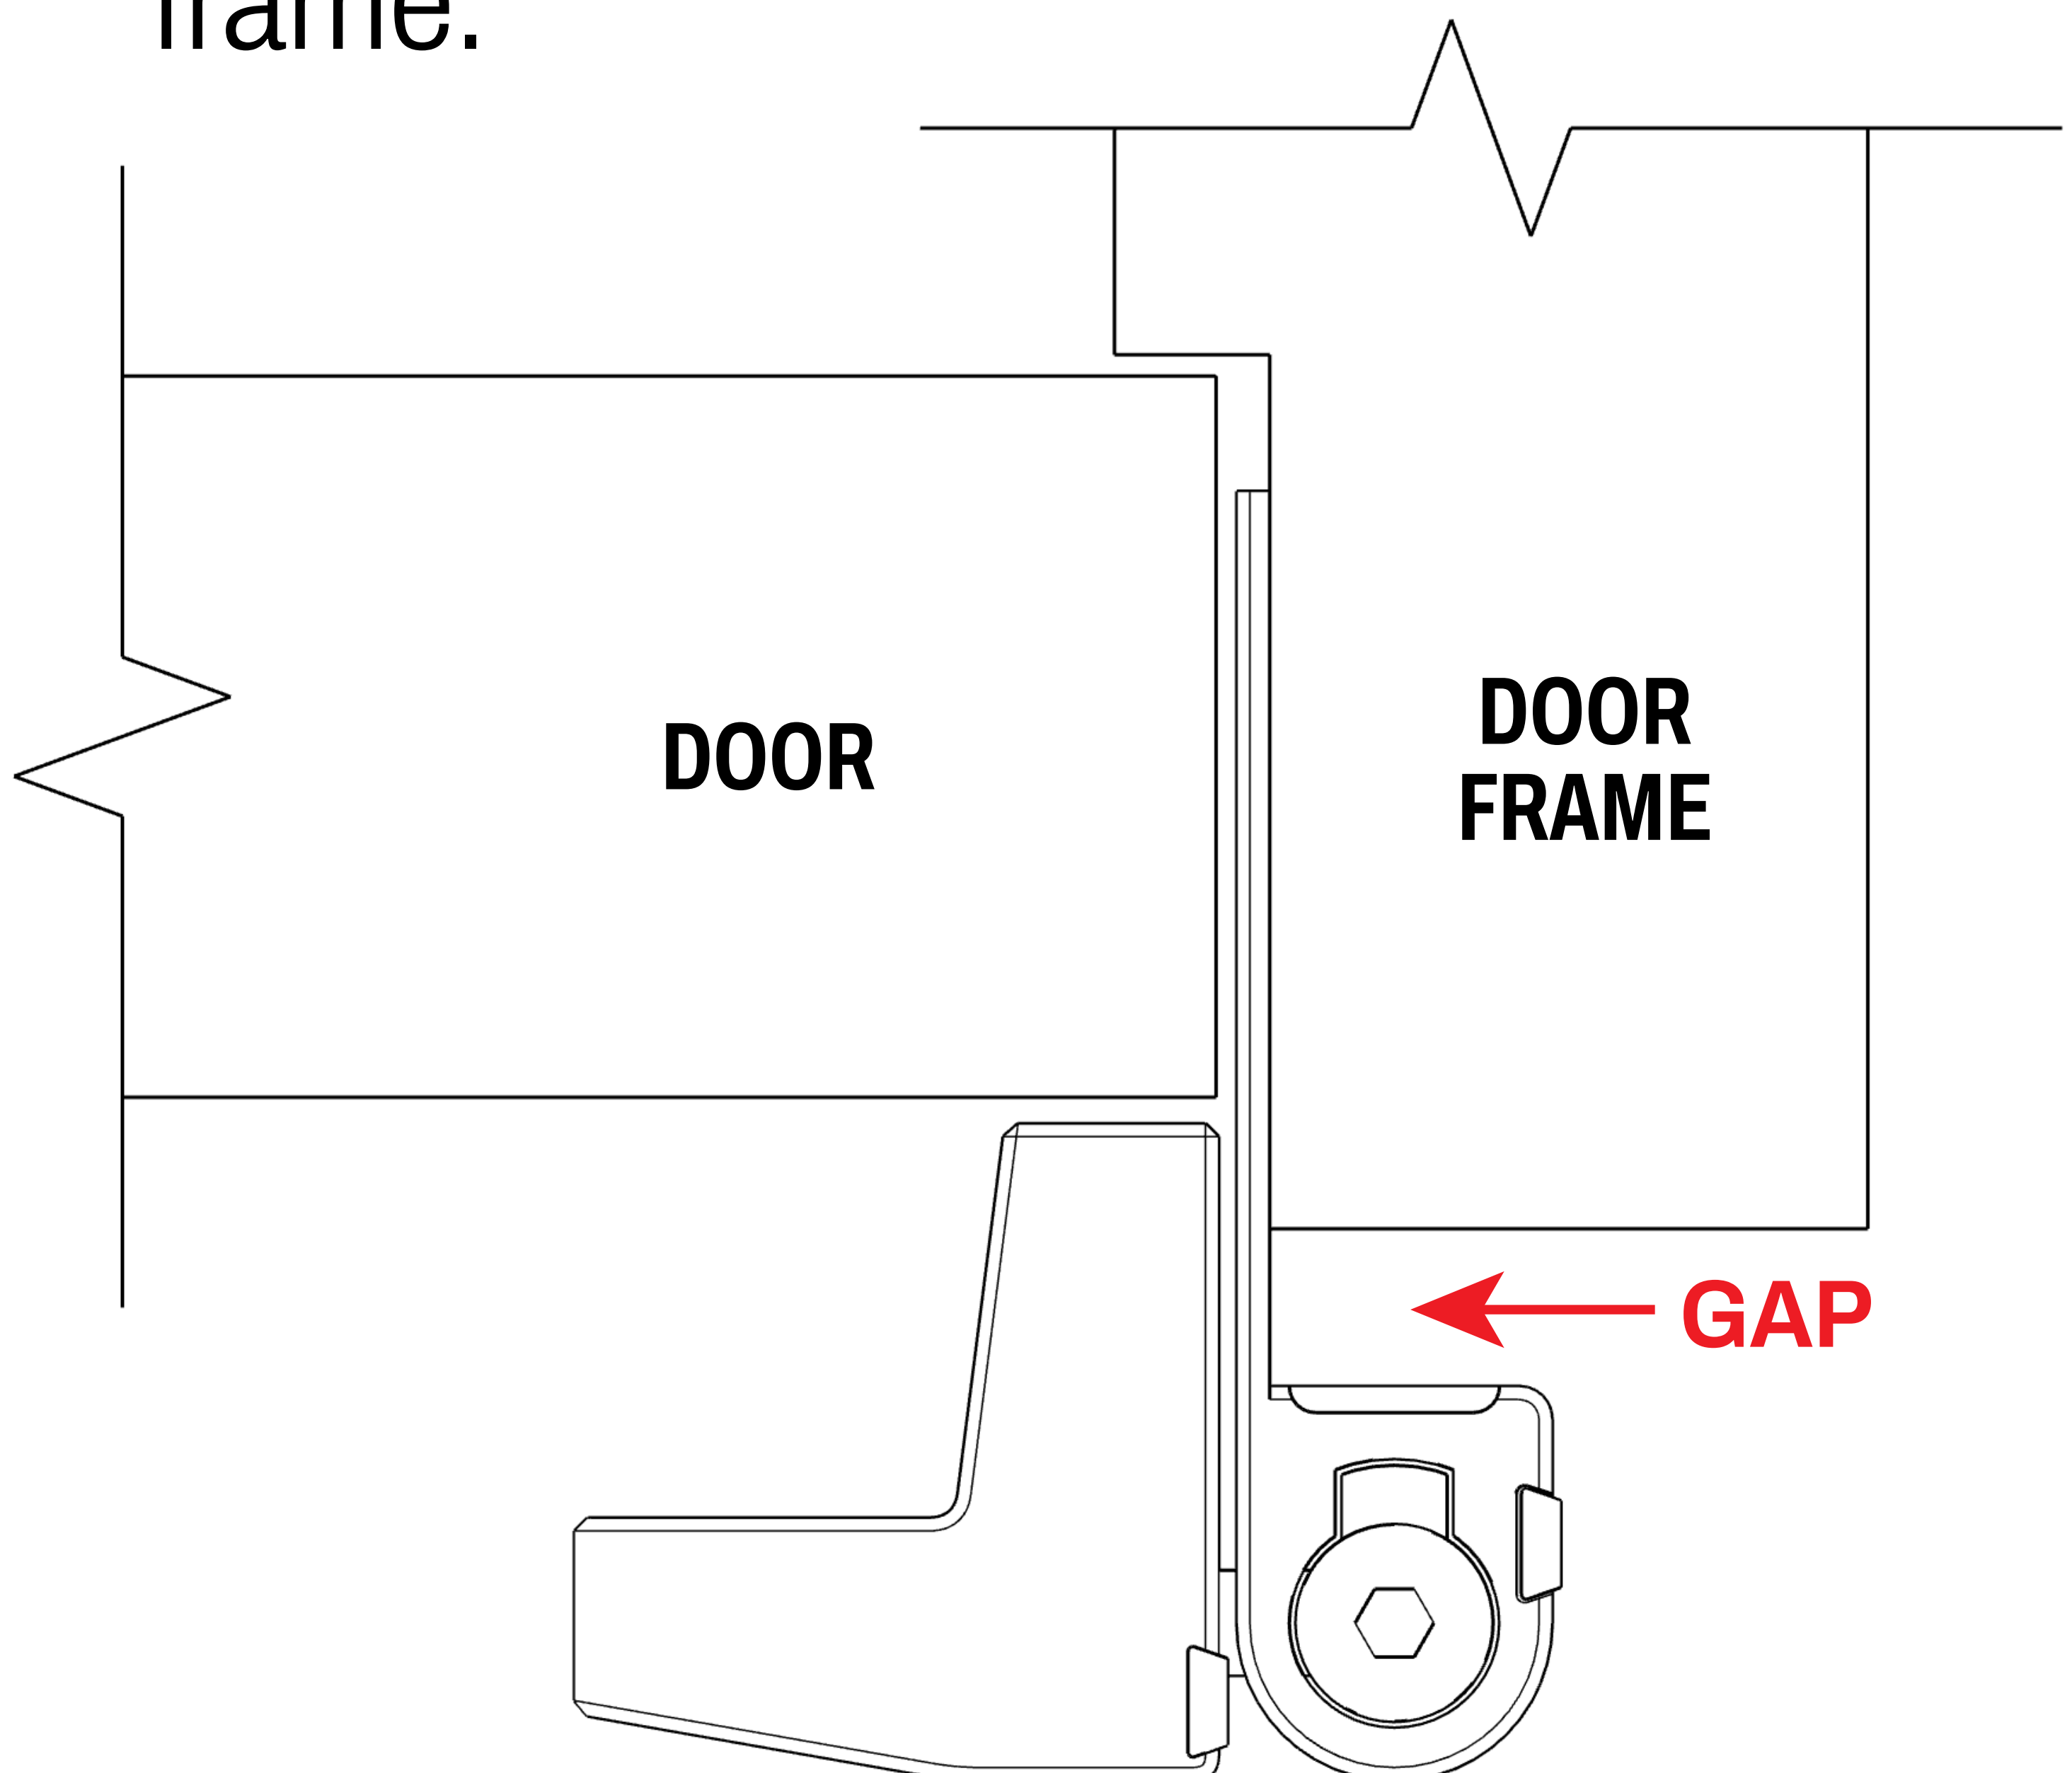


EXAMPLE 1

To find the right sized spacer for the gap, test out the 1/8, 3/8, and 5/8 spacers.

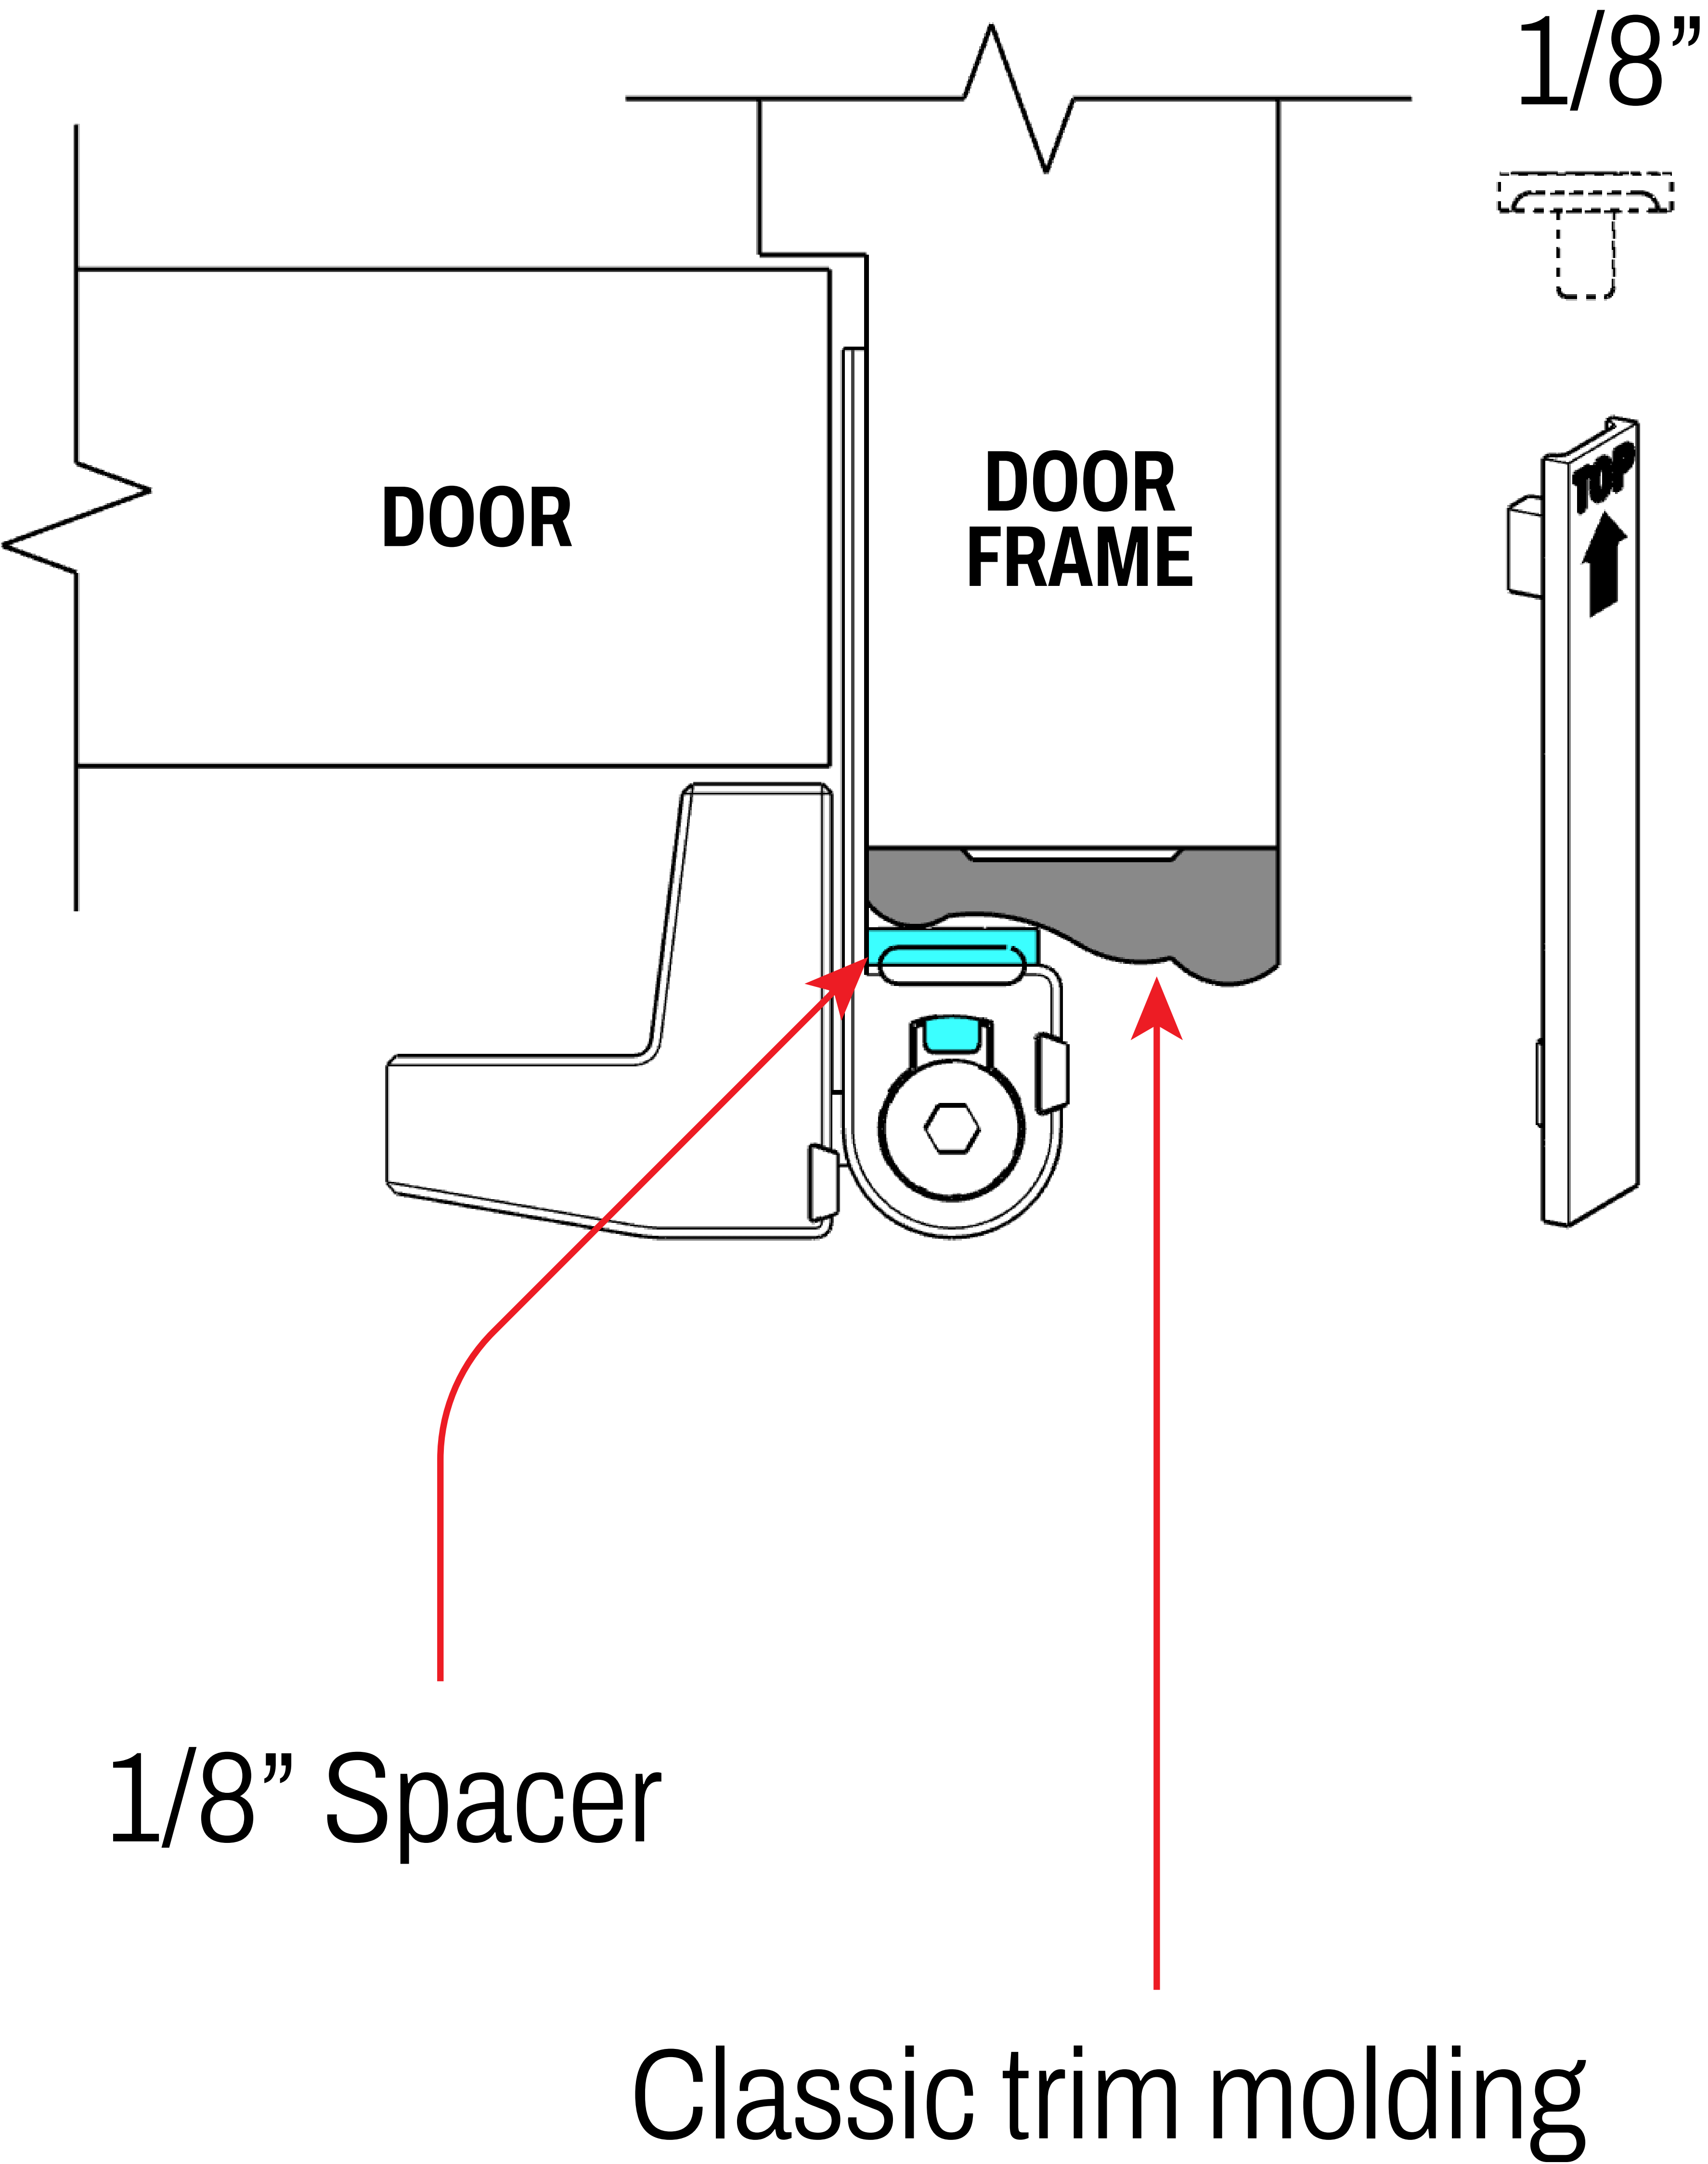


EXAMPLE 2



To find the right sized spacer for the gap, test out the 1/8, 3/8, and 5/8 spacers.

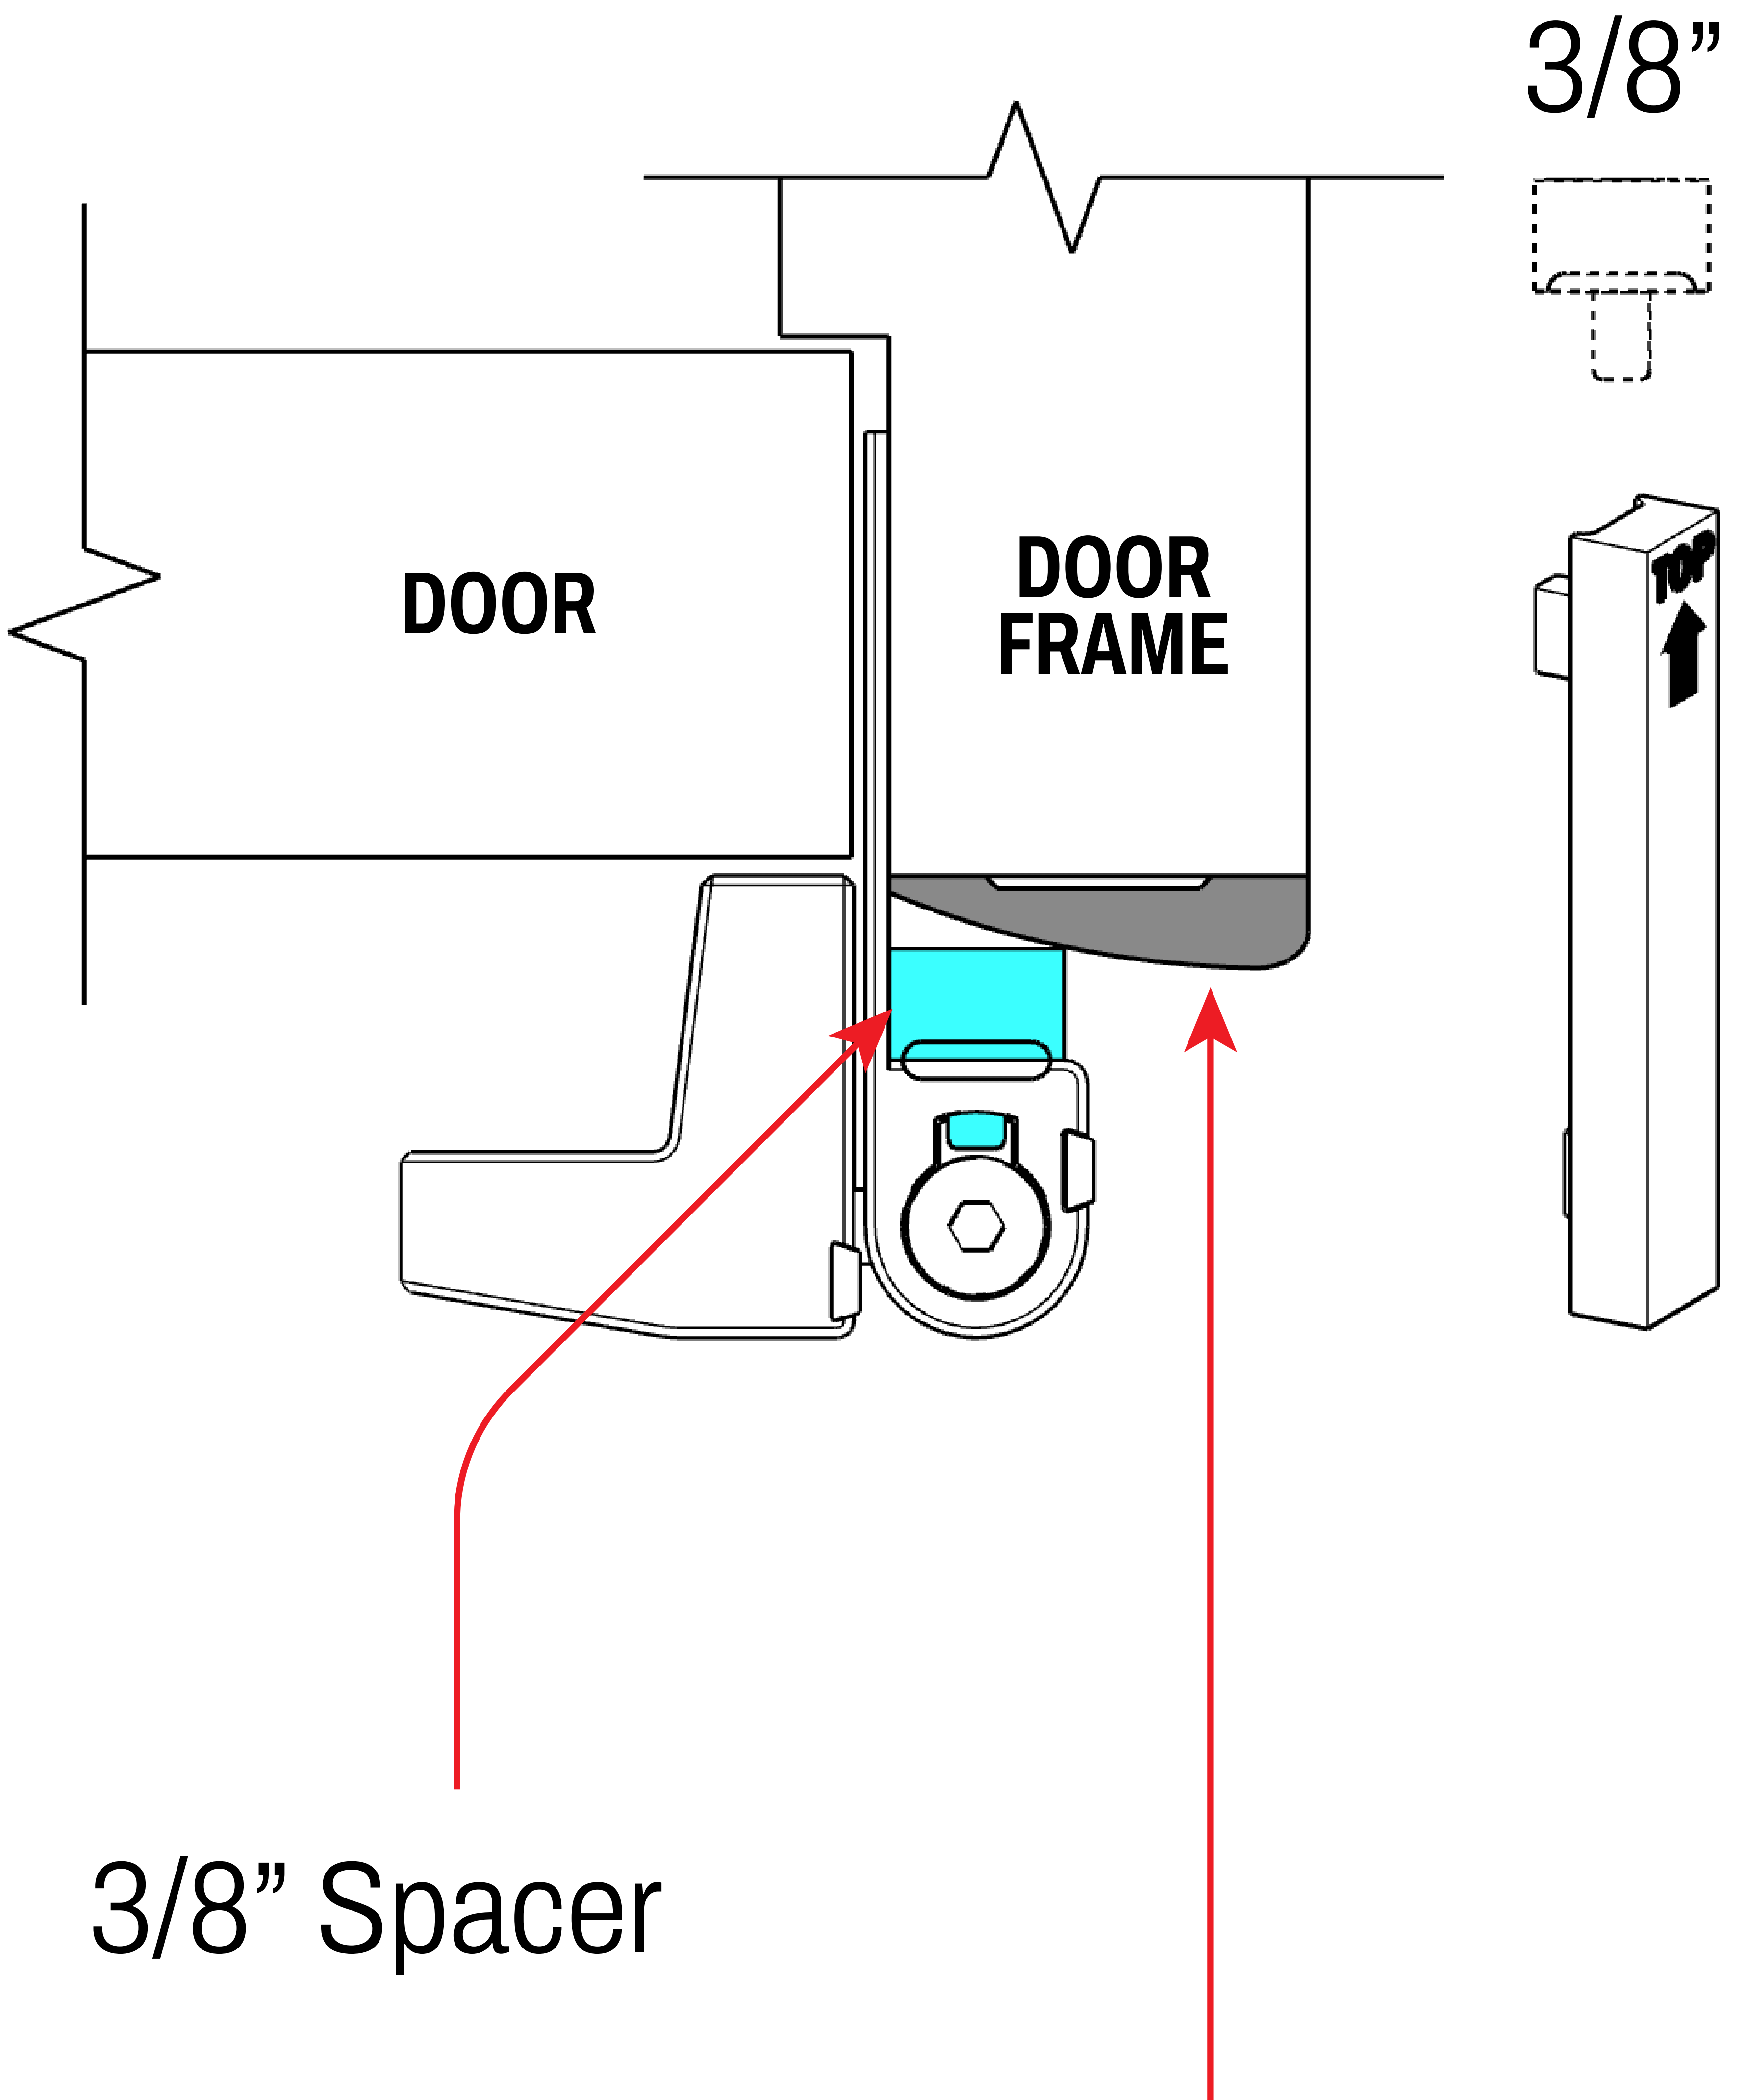

EXAMPLE 3

To find the right sized spacer for the gap, test out the 1/8, 3/8, and 5/8 spacers.

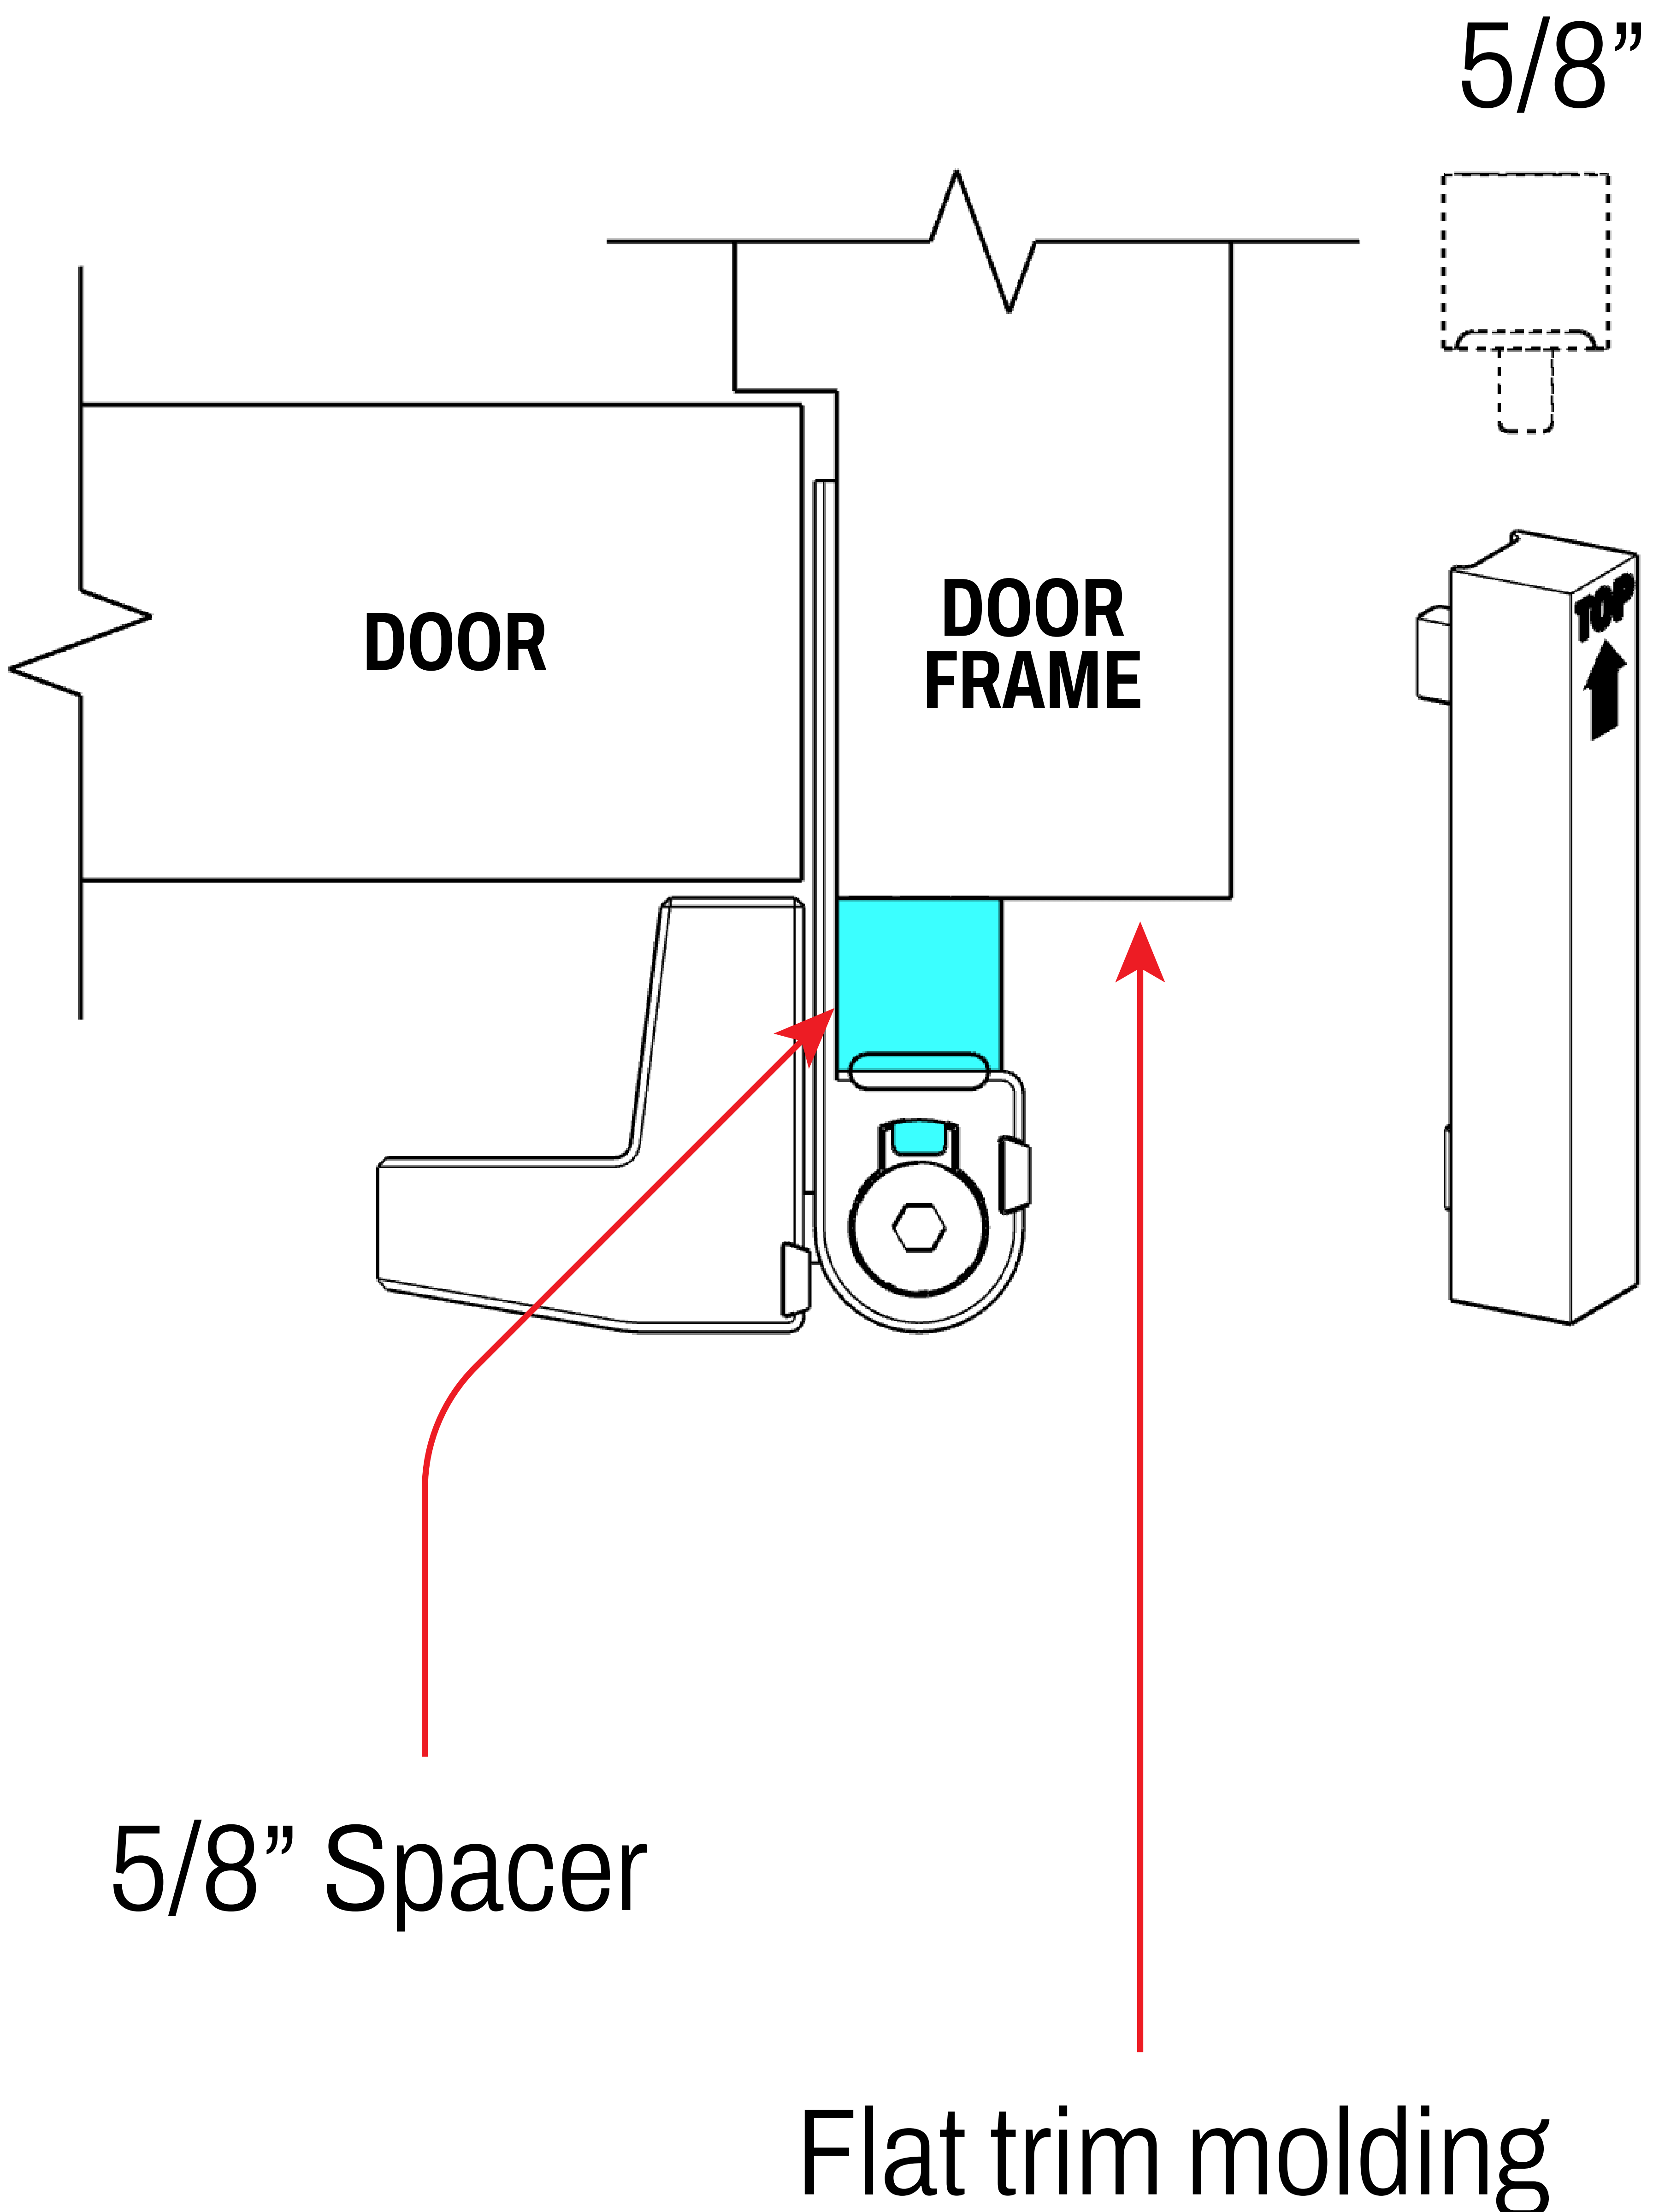


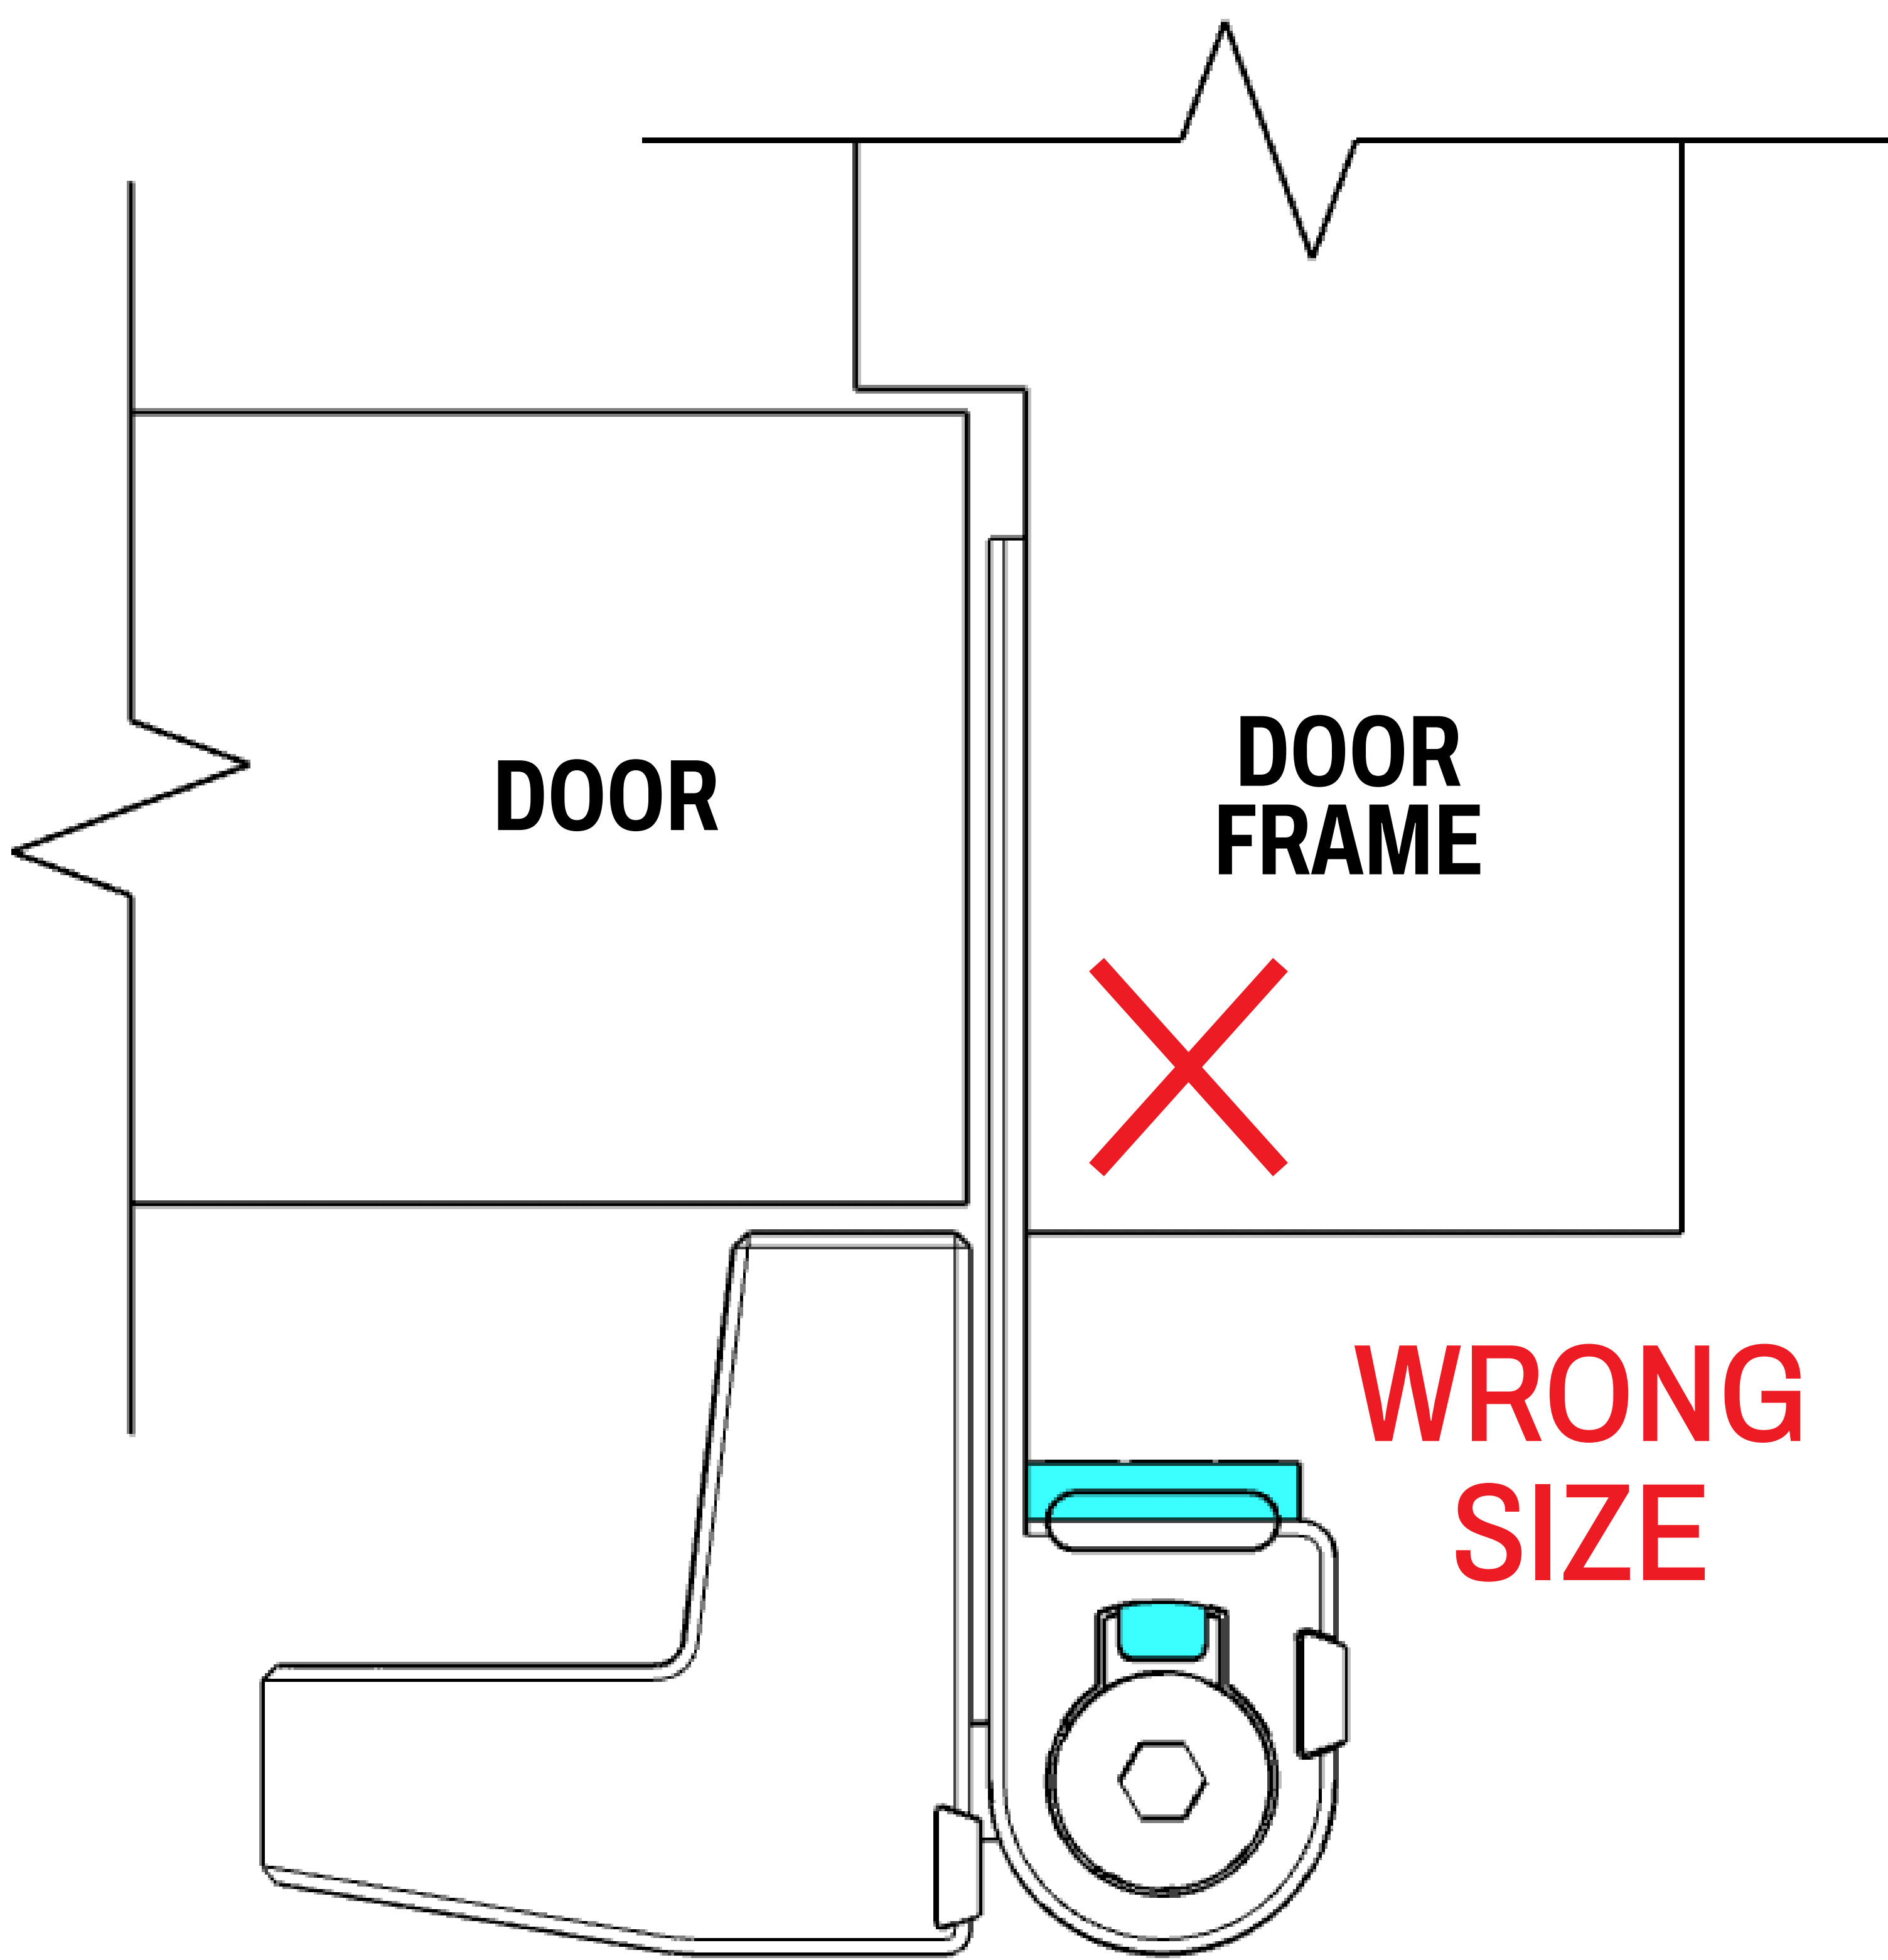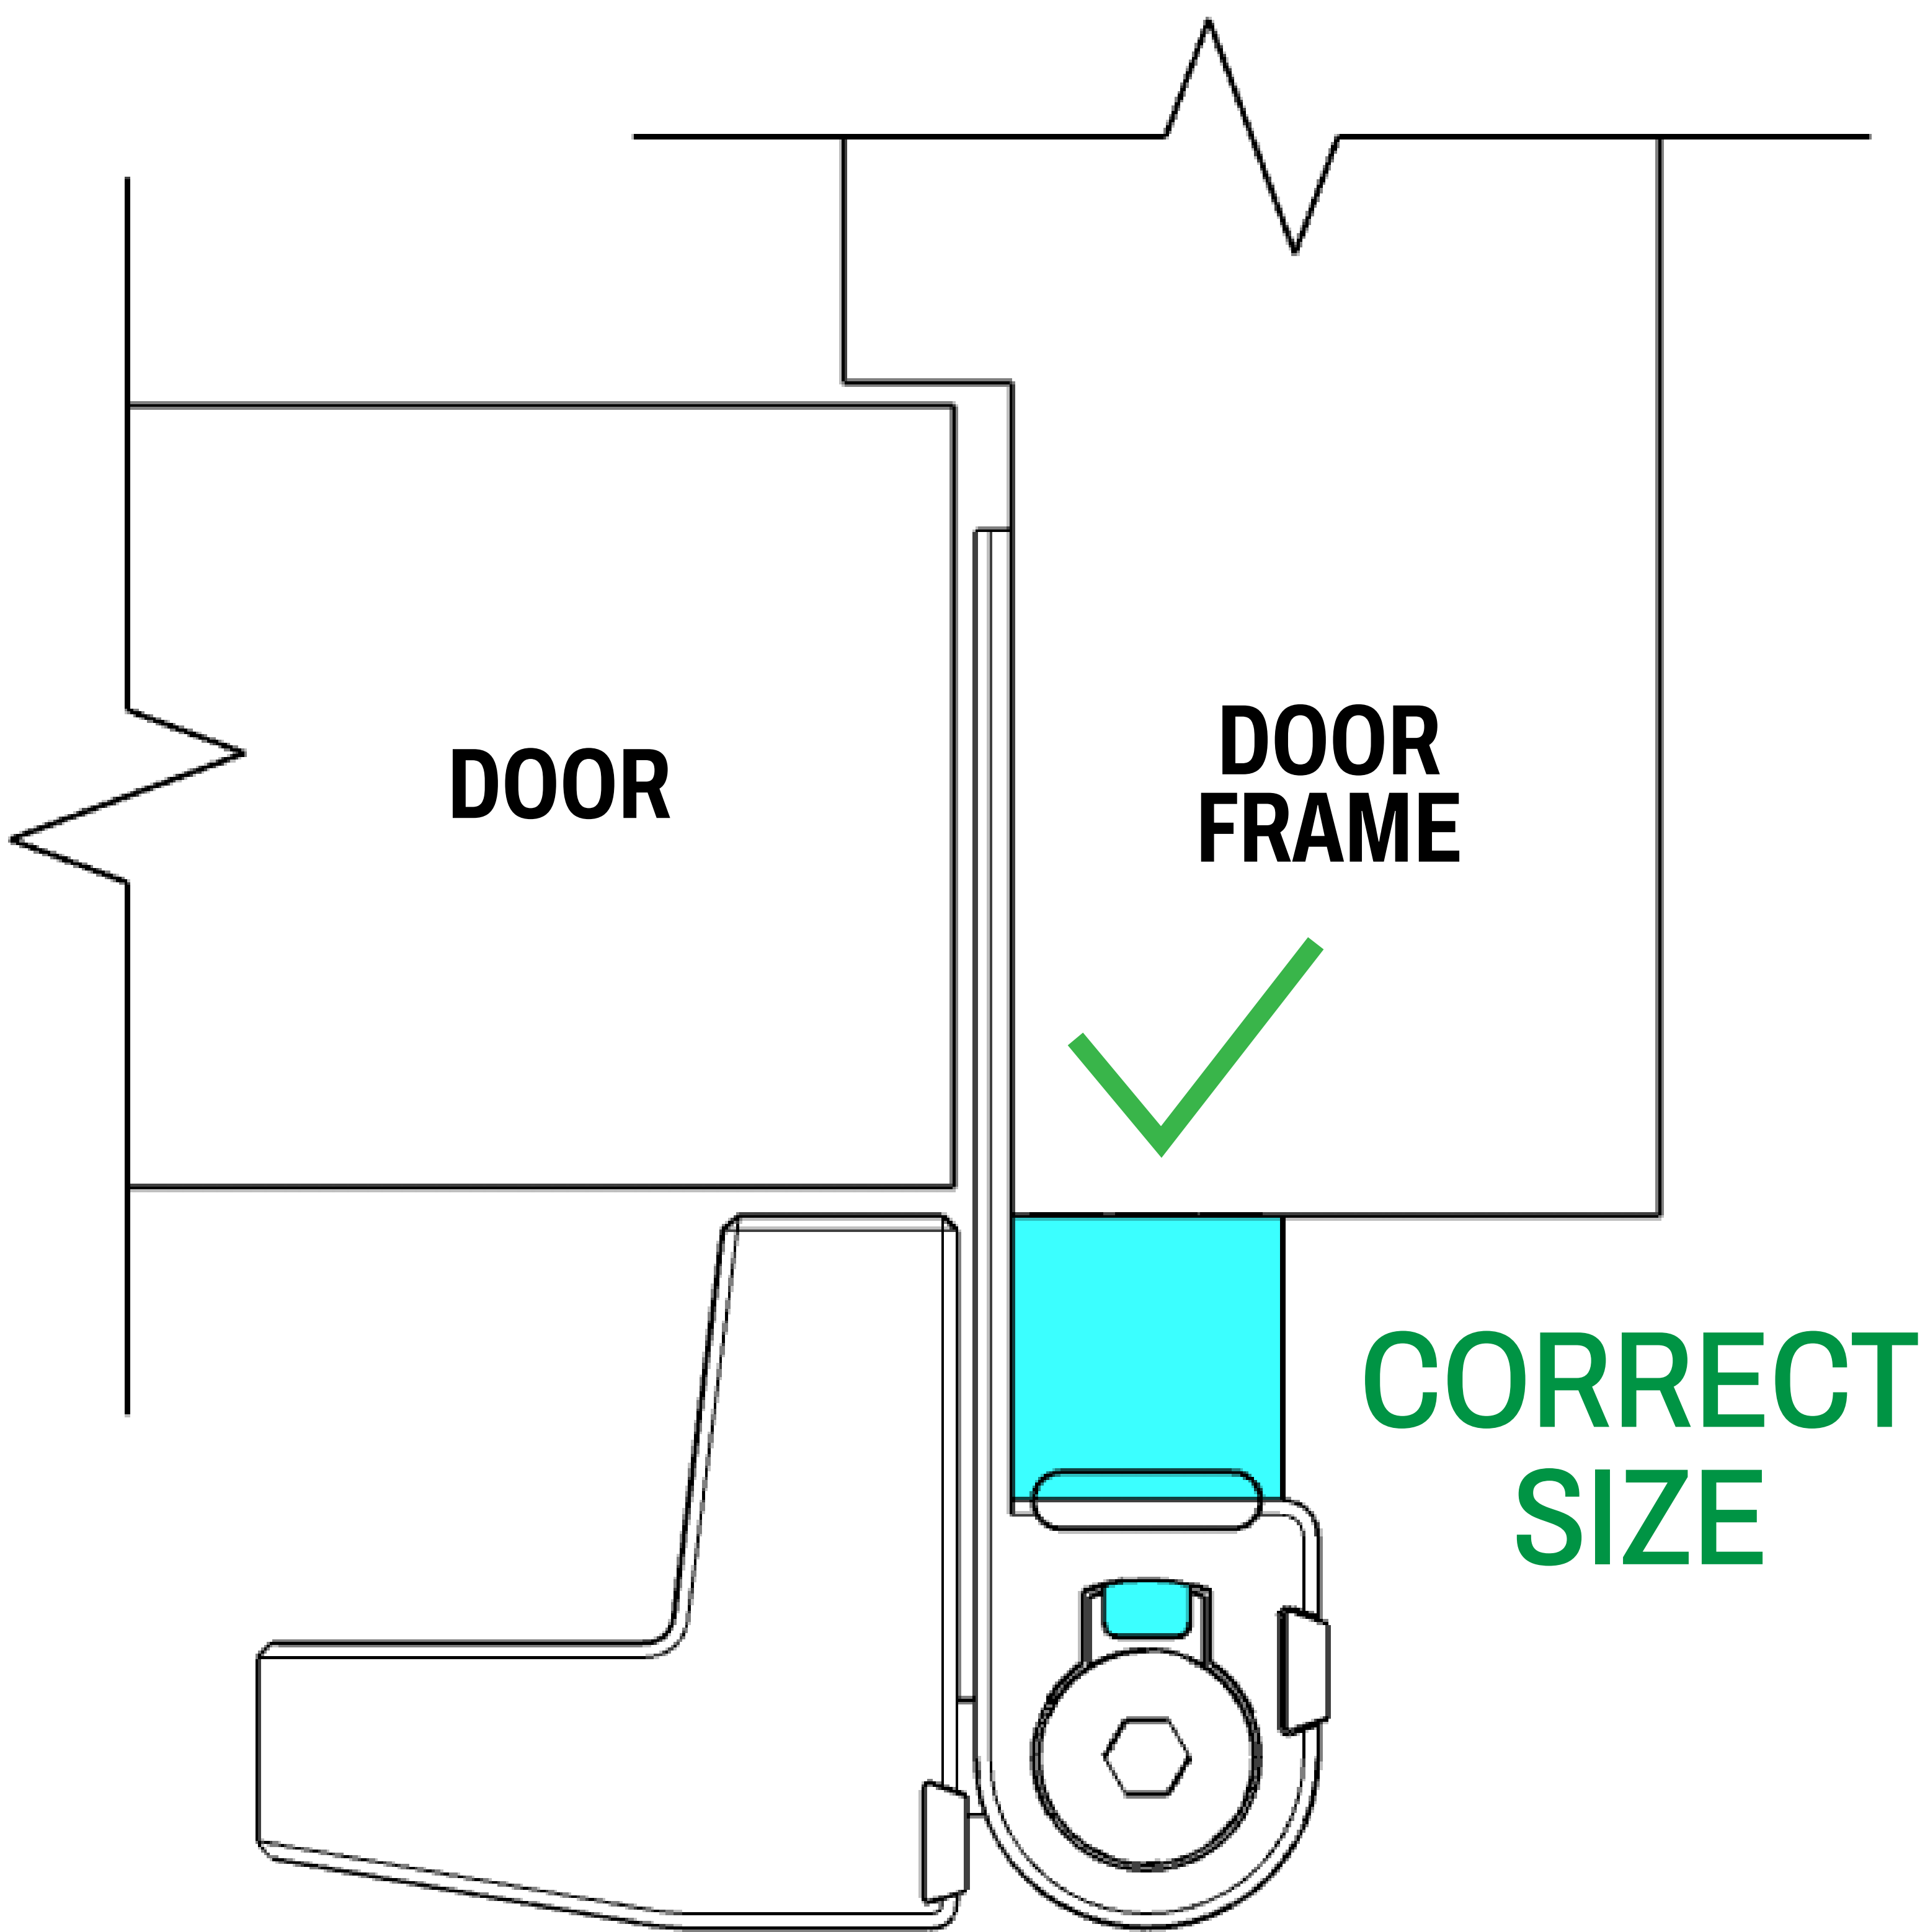

WARNING:

**Wrong sized spacer significantly
weaken the strength of the lock**


**ATTEMPTED
FORCED ENTRY**

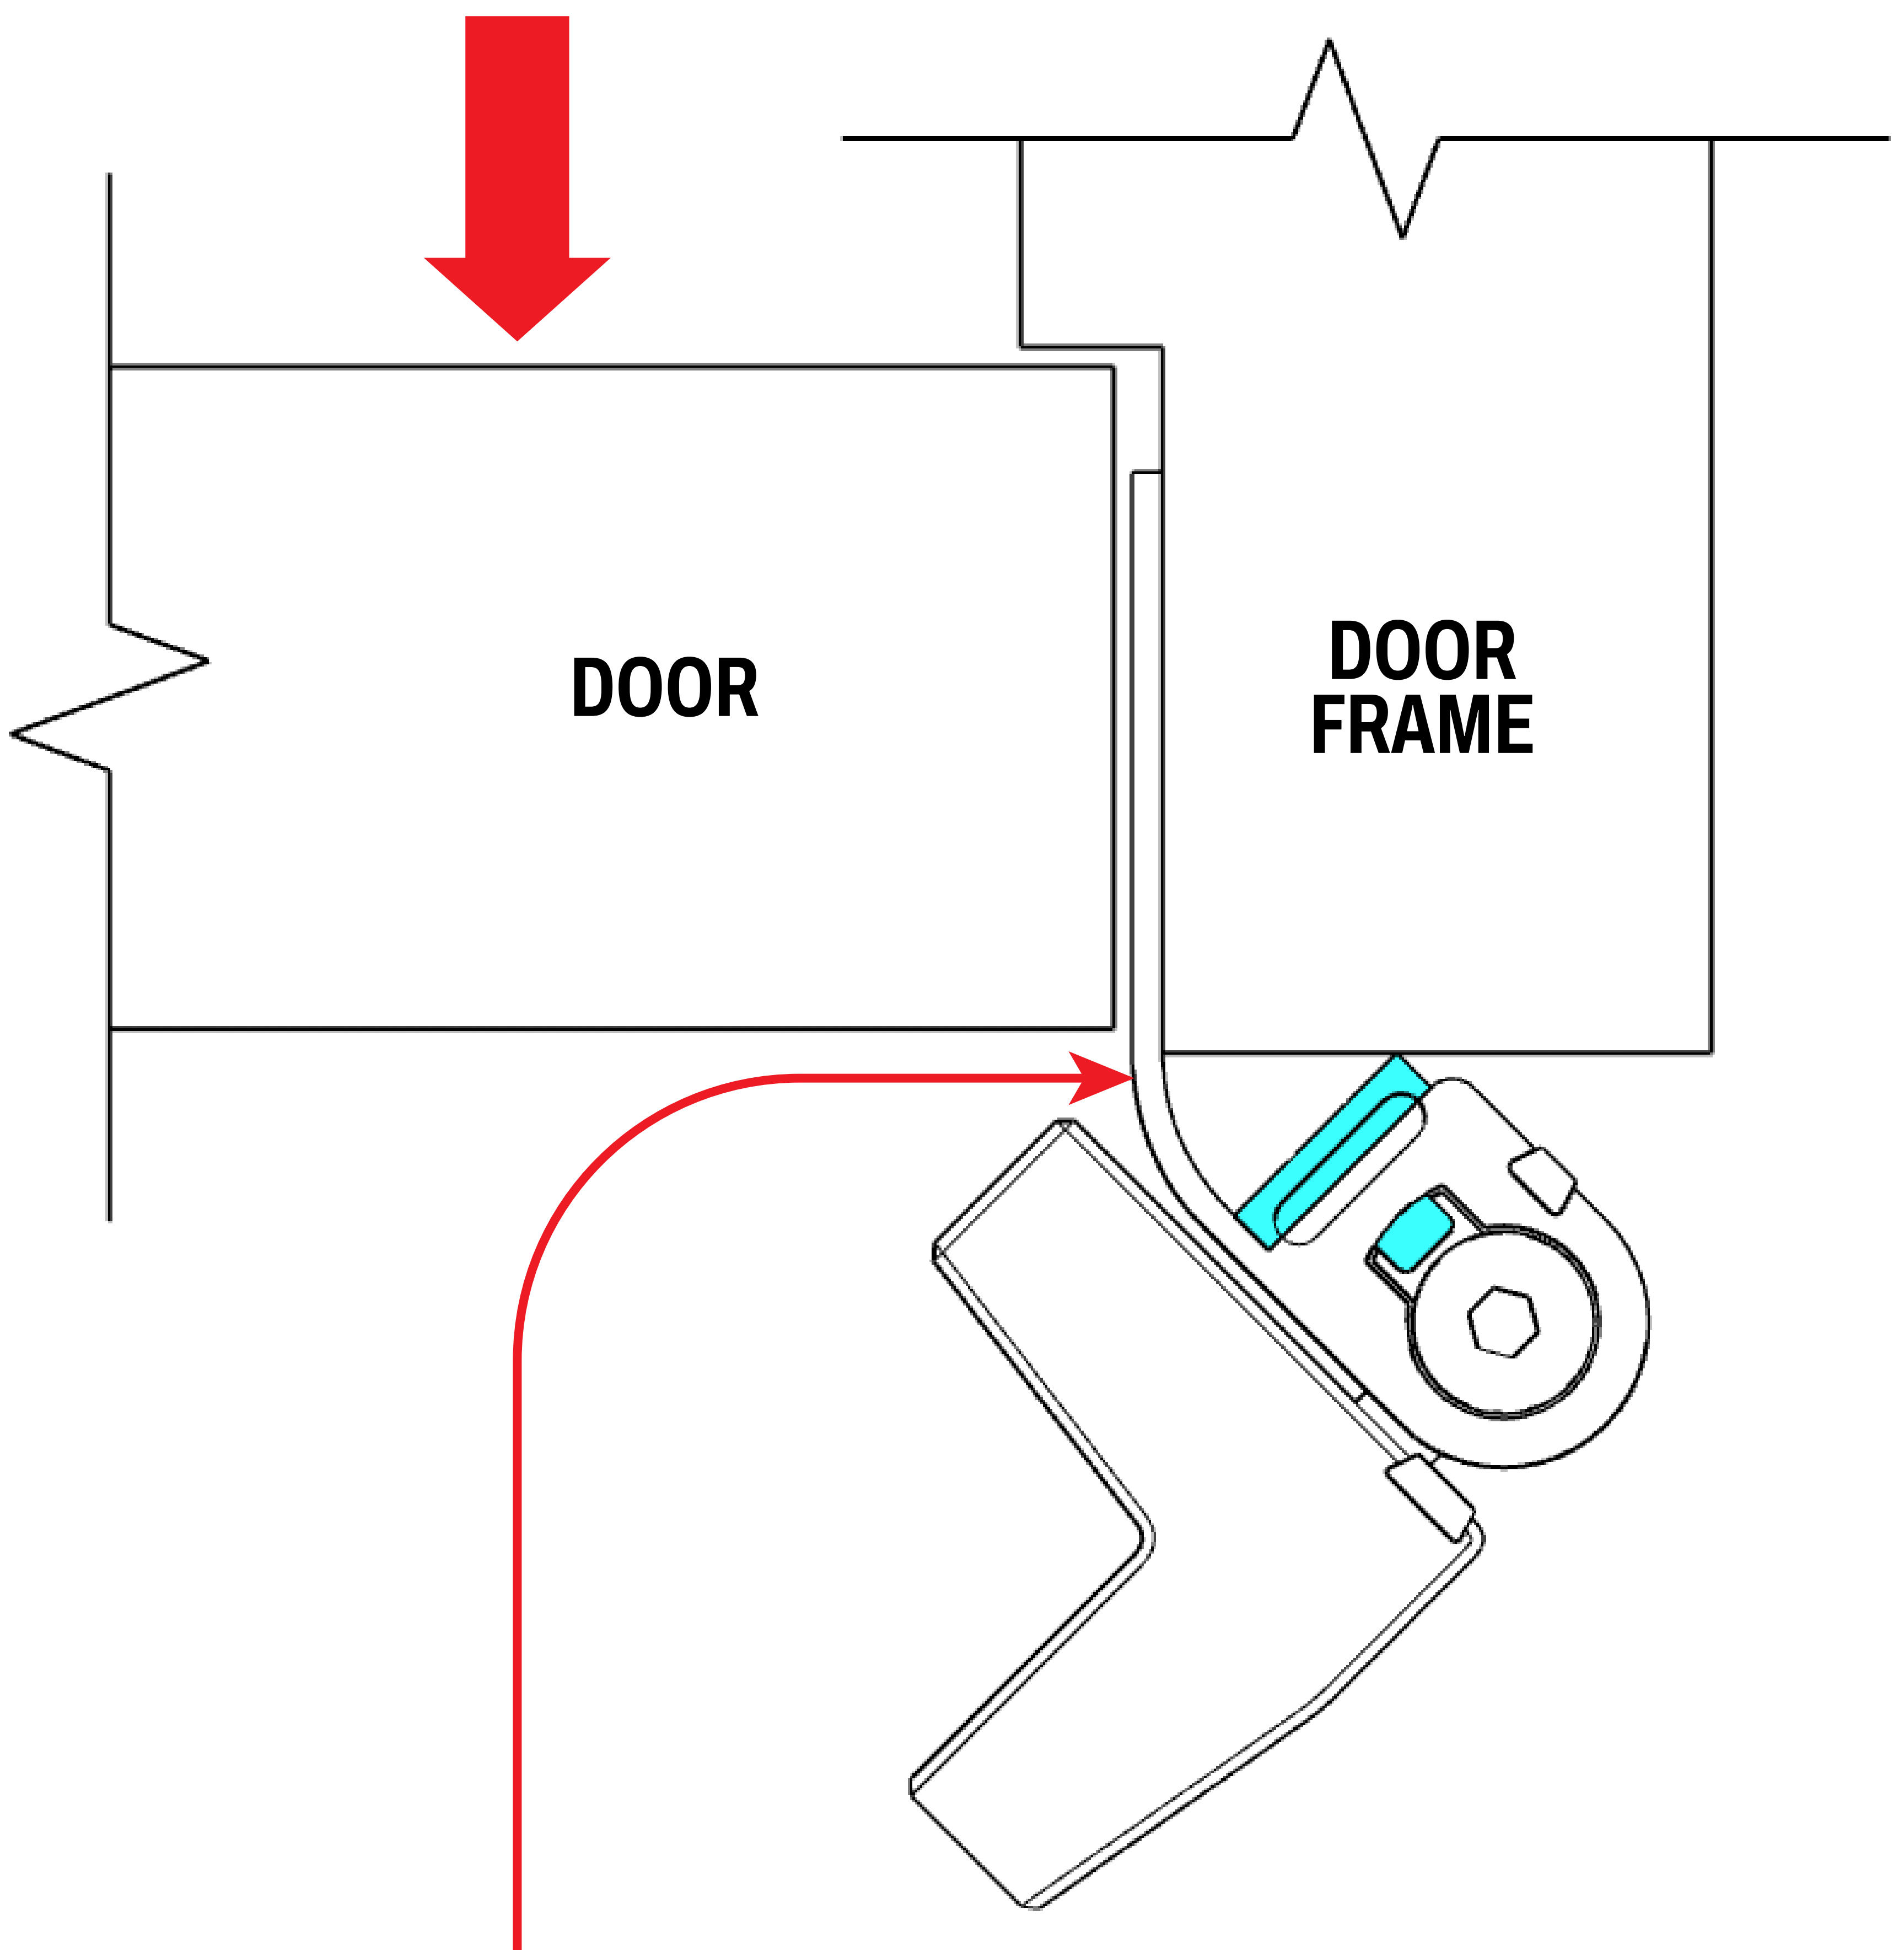


**MOUNTING PLATE
COULD BEND IF NOT
PROPERLY SUPPORTED**

6

With the door open, position the lock on the door frame in the unlocked position. Then, mark the six mounting holes.

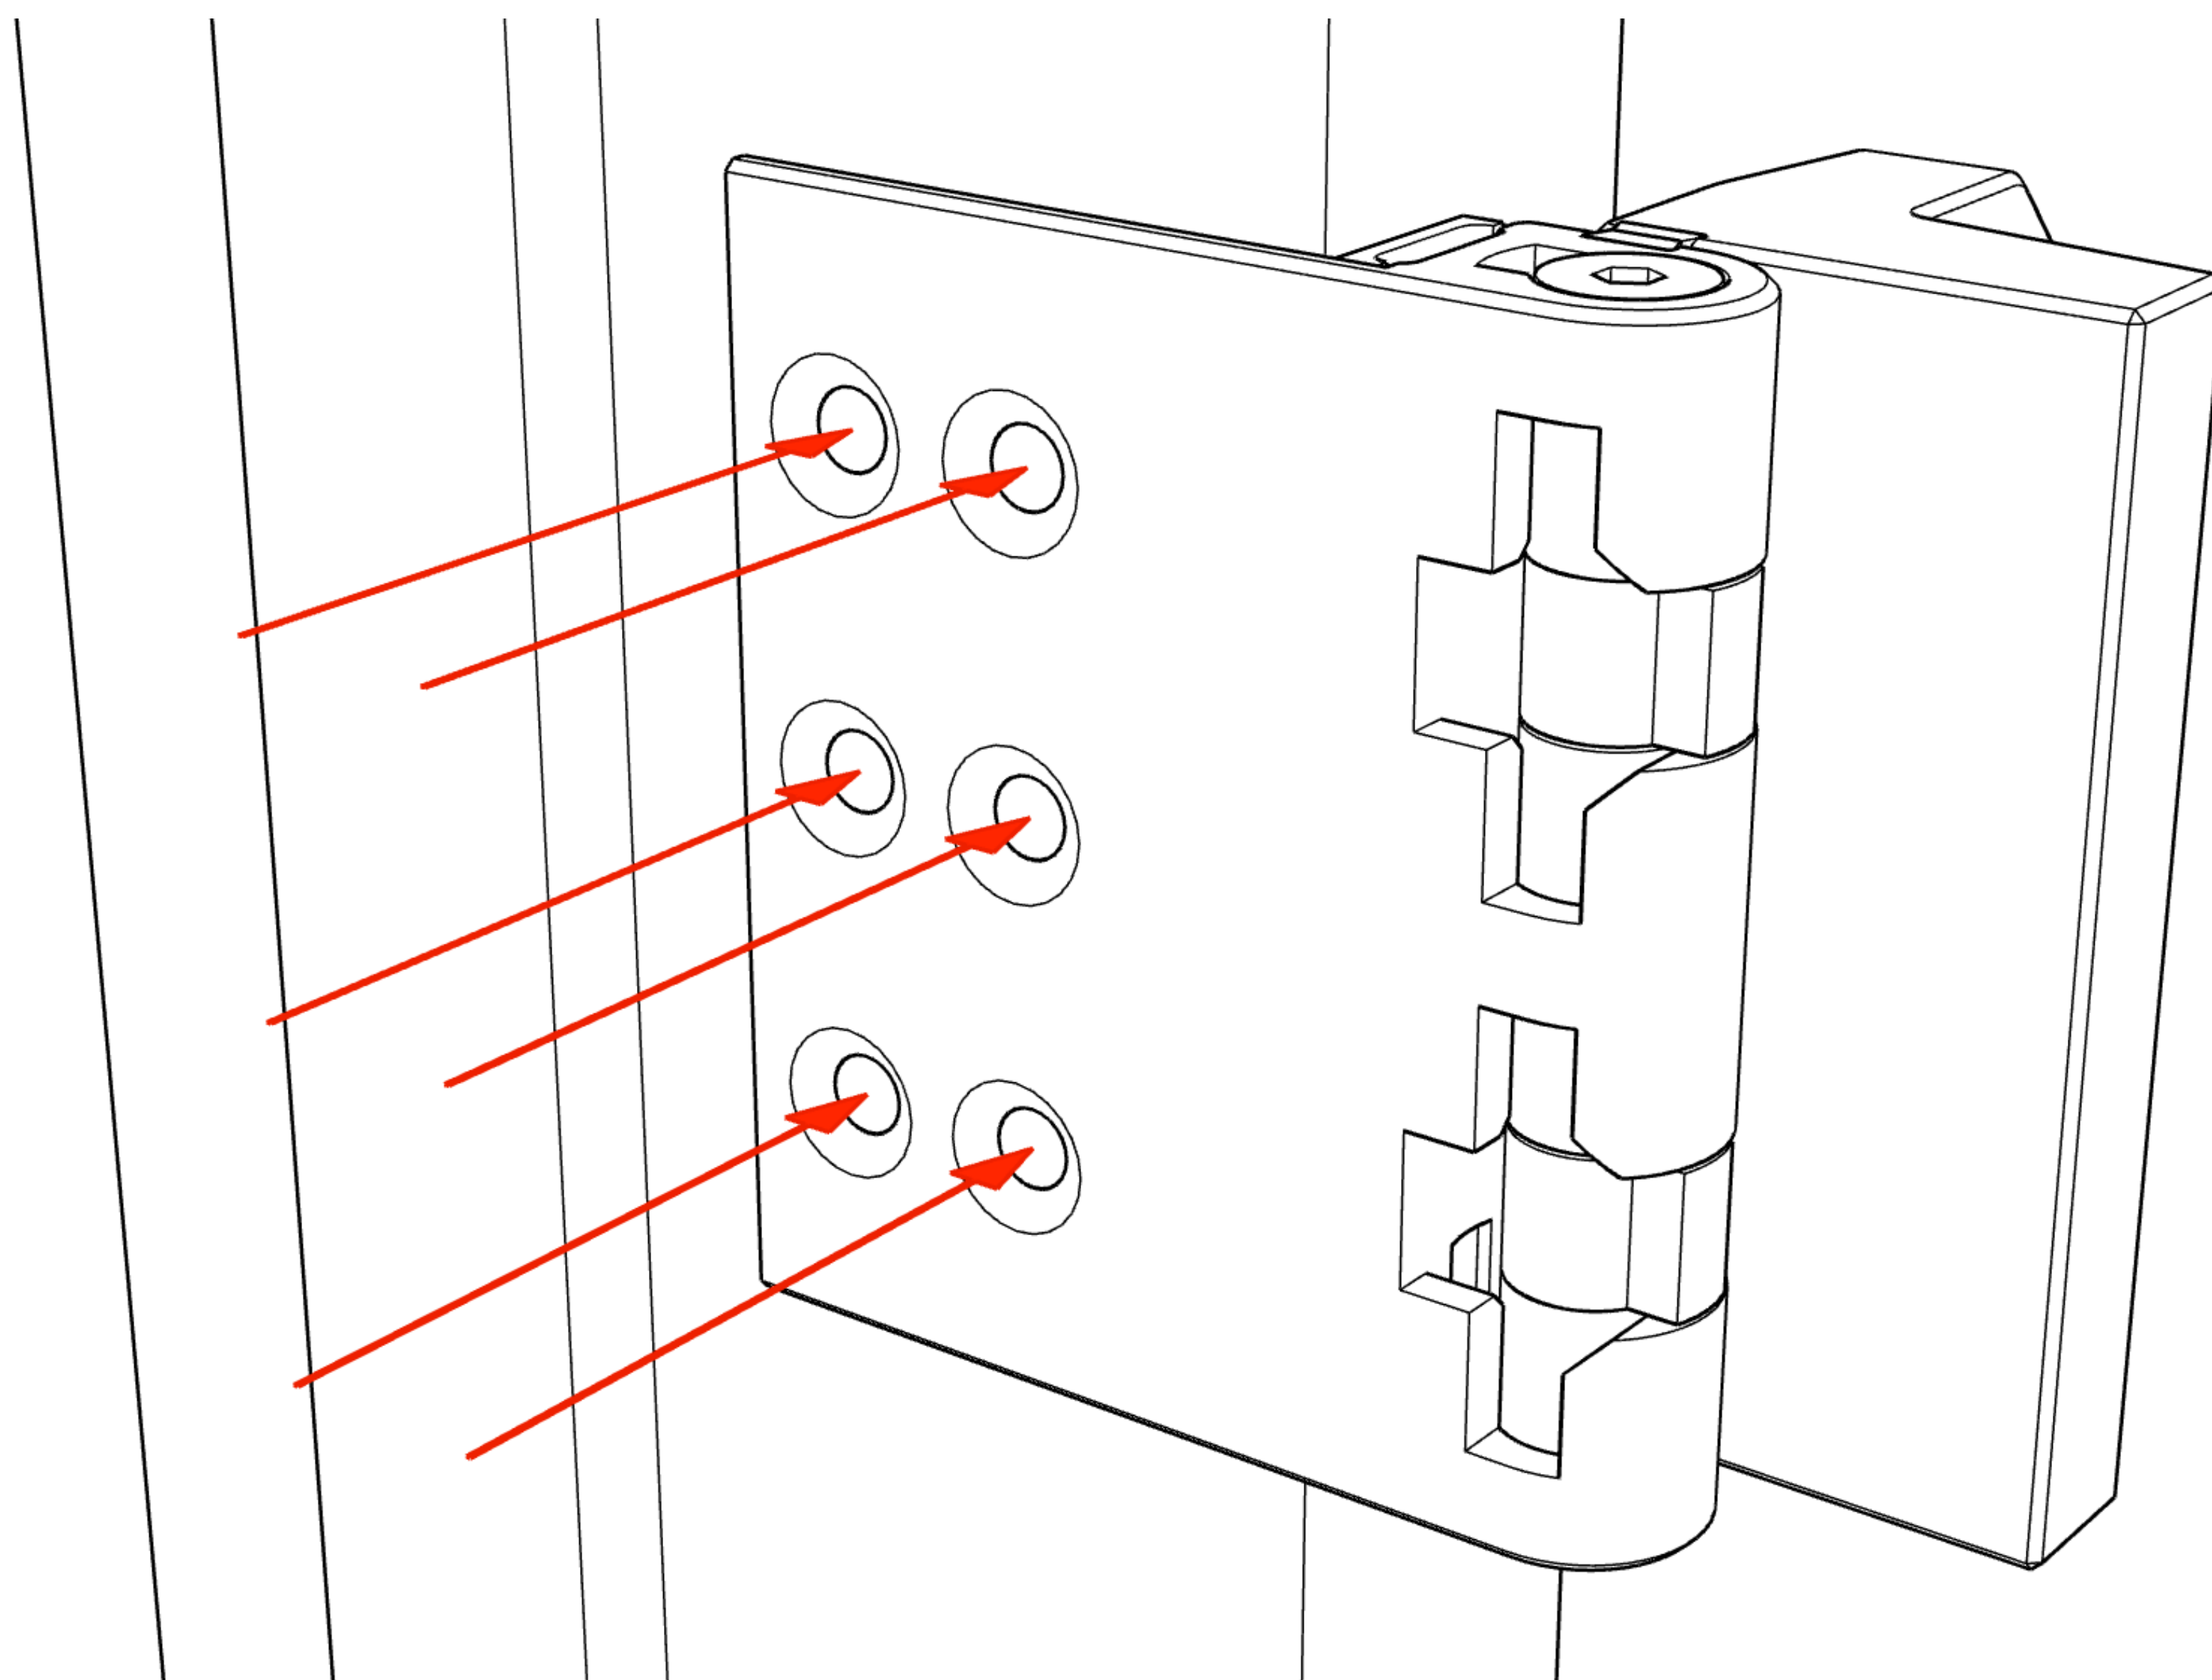
**7**

To prevent any splitting of the wood in the door frame, be sure to pre-drill the screw locations using a 1/8" drill bit.

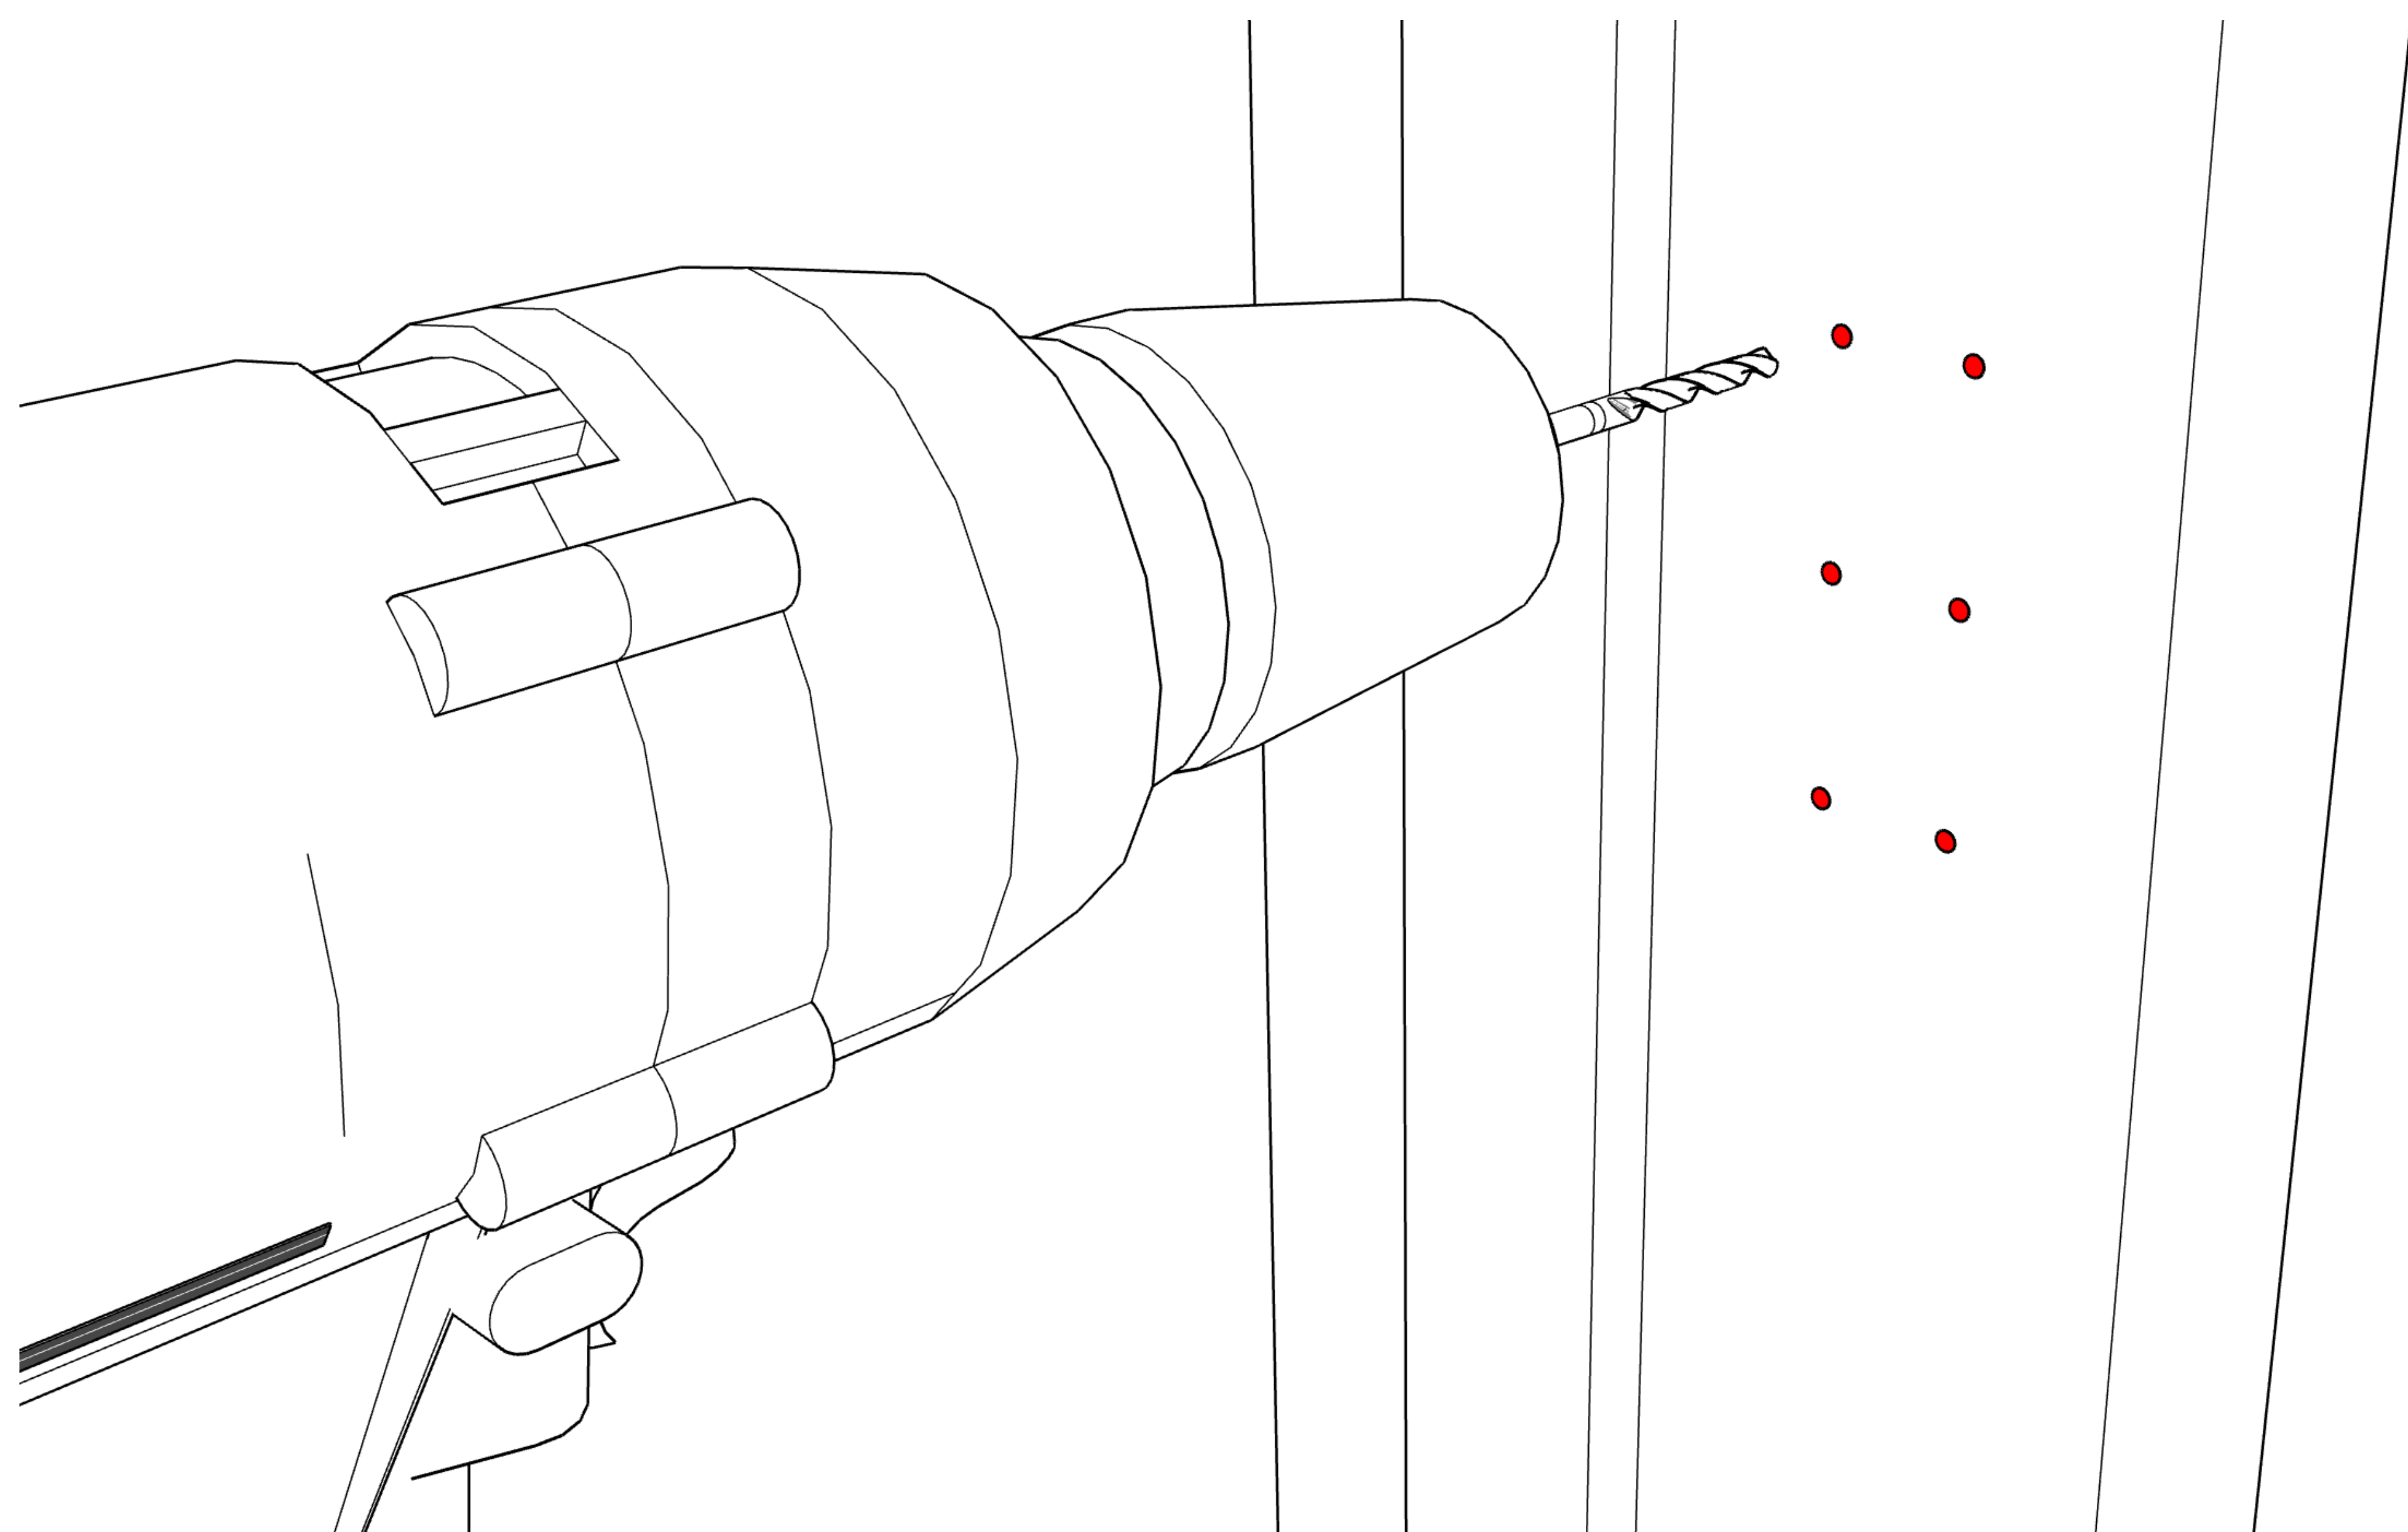

8

Install the six phillips screws.

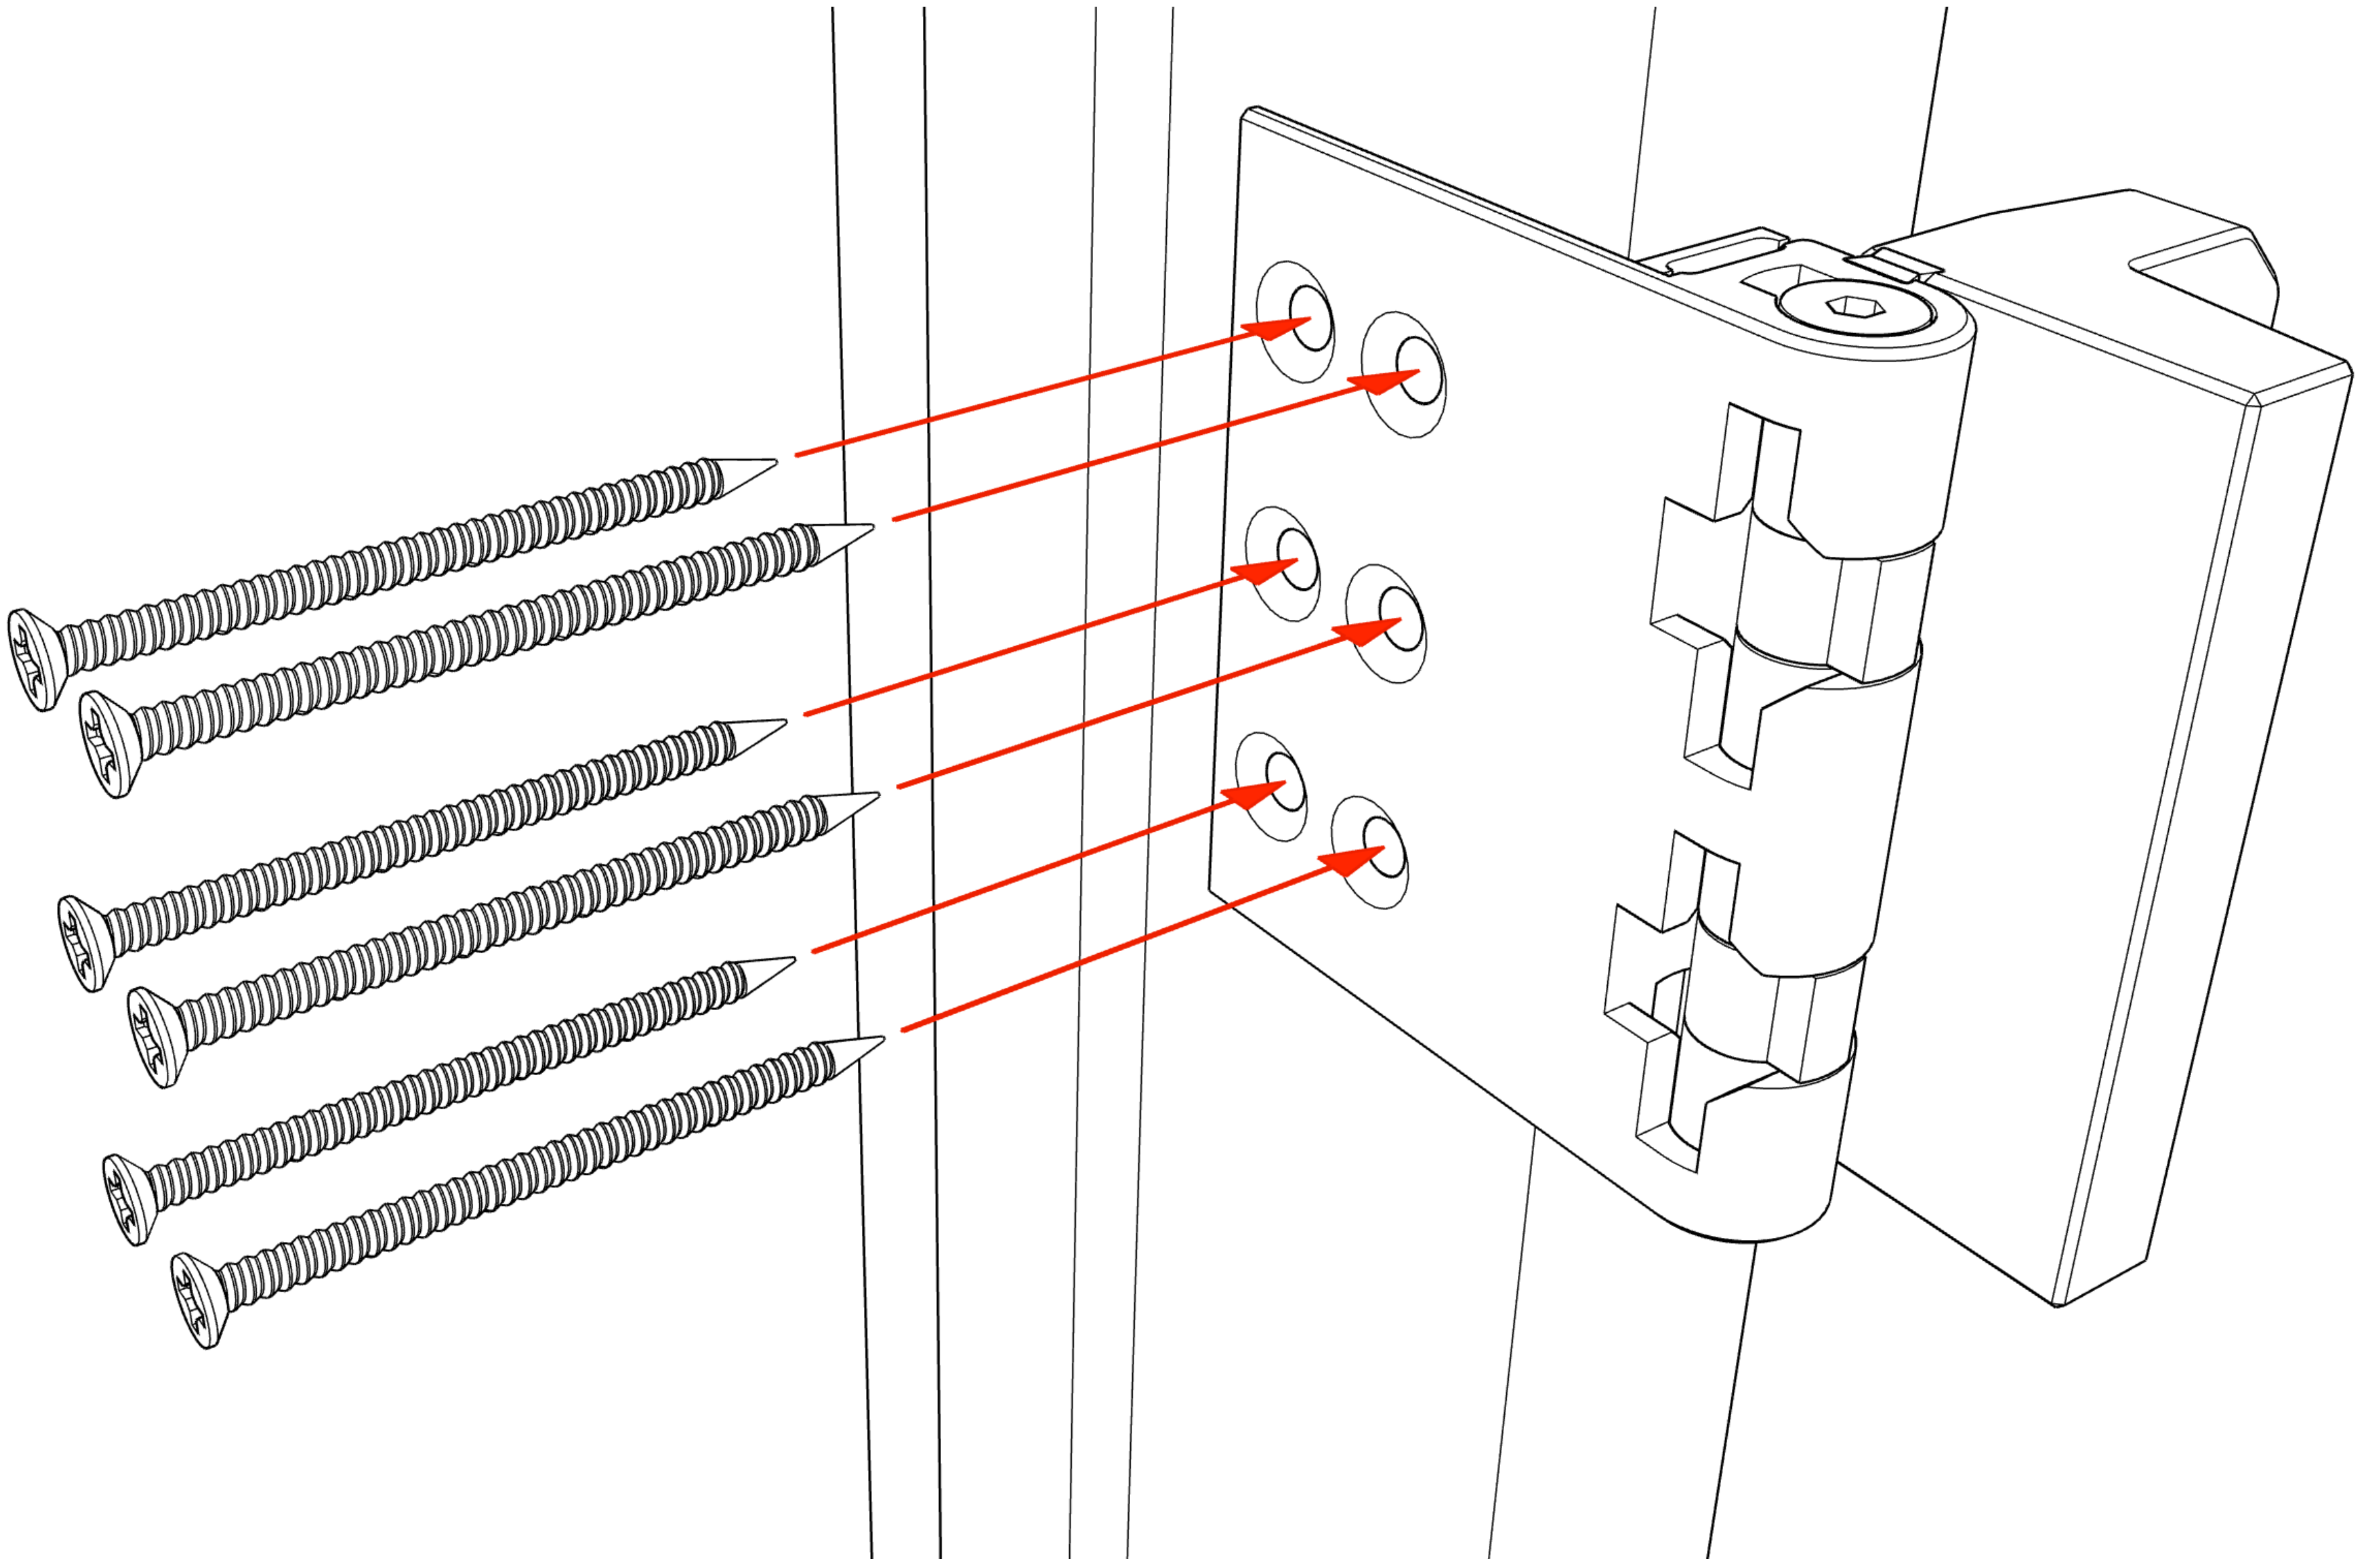

9

INSTALLATION COMPLETE

